



TOYOTA 8A BLADE AKL KIT

WORK WITH IM608 IM508 APB112 AND G-BOX2



Features

- > No need to disassemble, read or replace the anti-theft box.
- > Used with Autel IM508, Autel IM608, G-Box2 and APB112 Adapter
- > Used for Programming of Toyota / Lexus / Scion 8A Blade Keys



SCAN ME



TOYOTA 8A BLADE AKL KIT

ALL KEY LOST OPERATION GUIDE / USER MANUAL

How to do Toyota 8A Blade Key All Key Lost by Autel IMMO Tool? Here is the operation guide. Please ensure that the Autel IMMO tablet is connected to the internet when using the All Keys Lost Functions

Tools you need:


Toyota 8A Blade AKL Kit

Autel MaxiIM IMMO Tablet (IM508 / IM608 / MaxiSys IM)


G-BOX/G-BOX2

APB112 Smart Key Emulator

TOYOTA 8A BLADE AKL KIT:

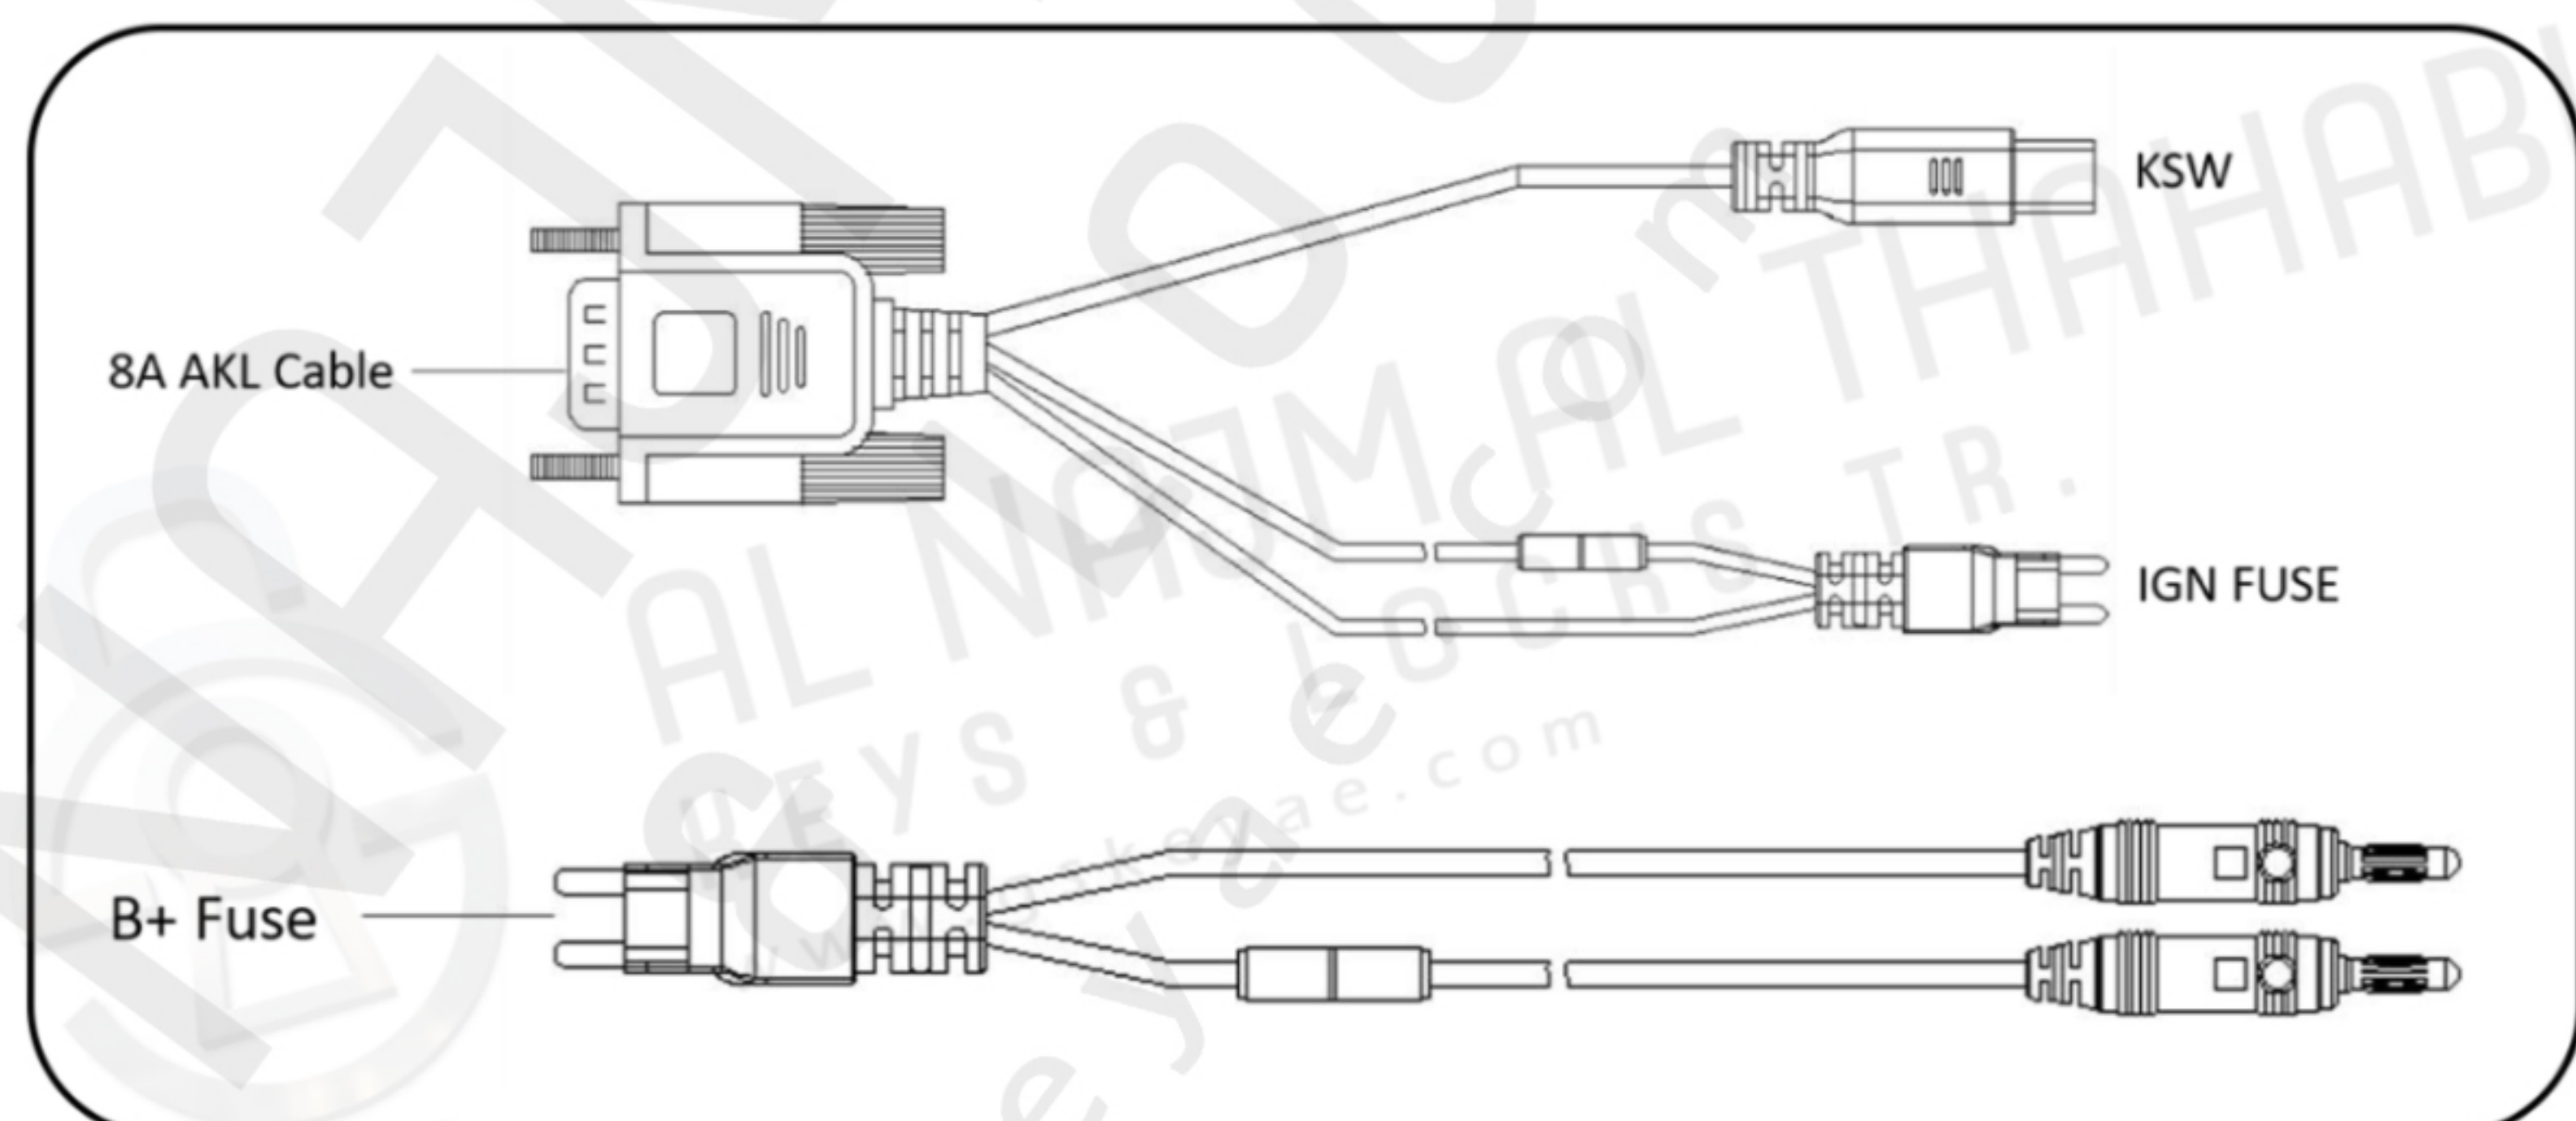


1 - Power on the tablet, tap [IMMO] on the tablet, and select one by one [Toyota] - [Manual Selection] [Camry] - [2015-] - [Blade Key] - [Control Unit] - [Immobilizer (H 8A/8E)] - [All Keys Lost].

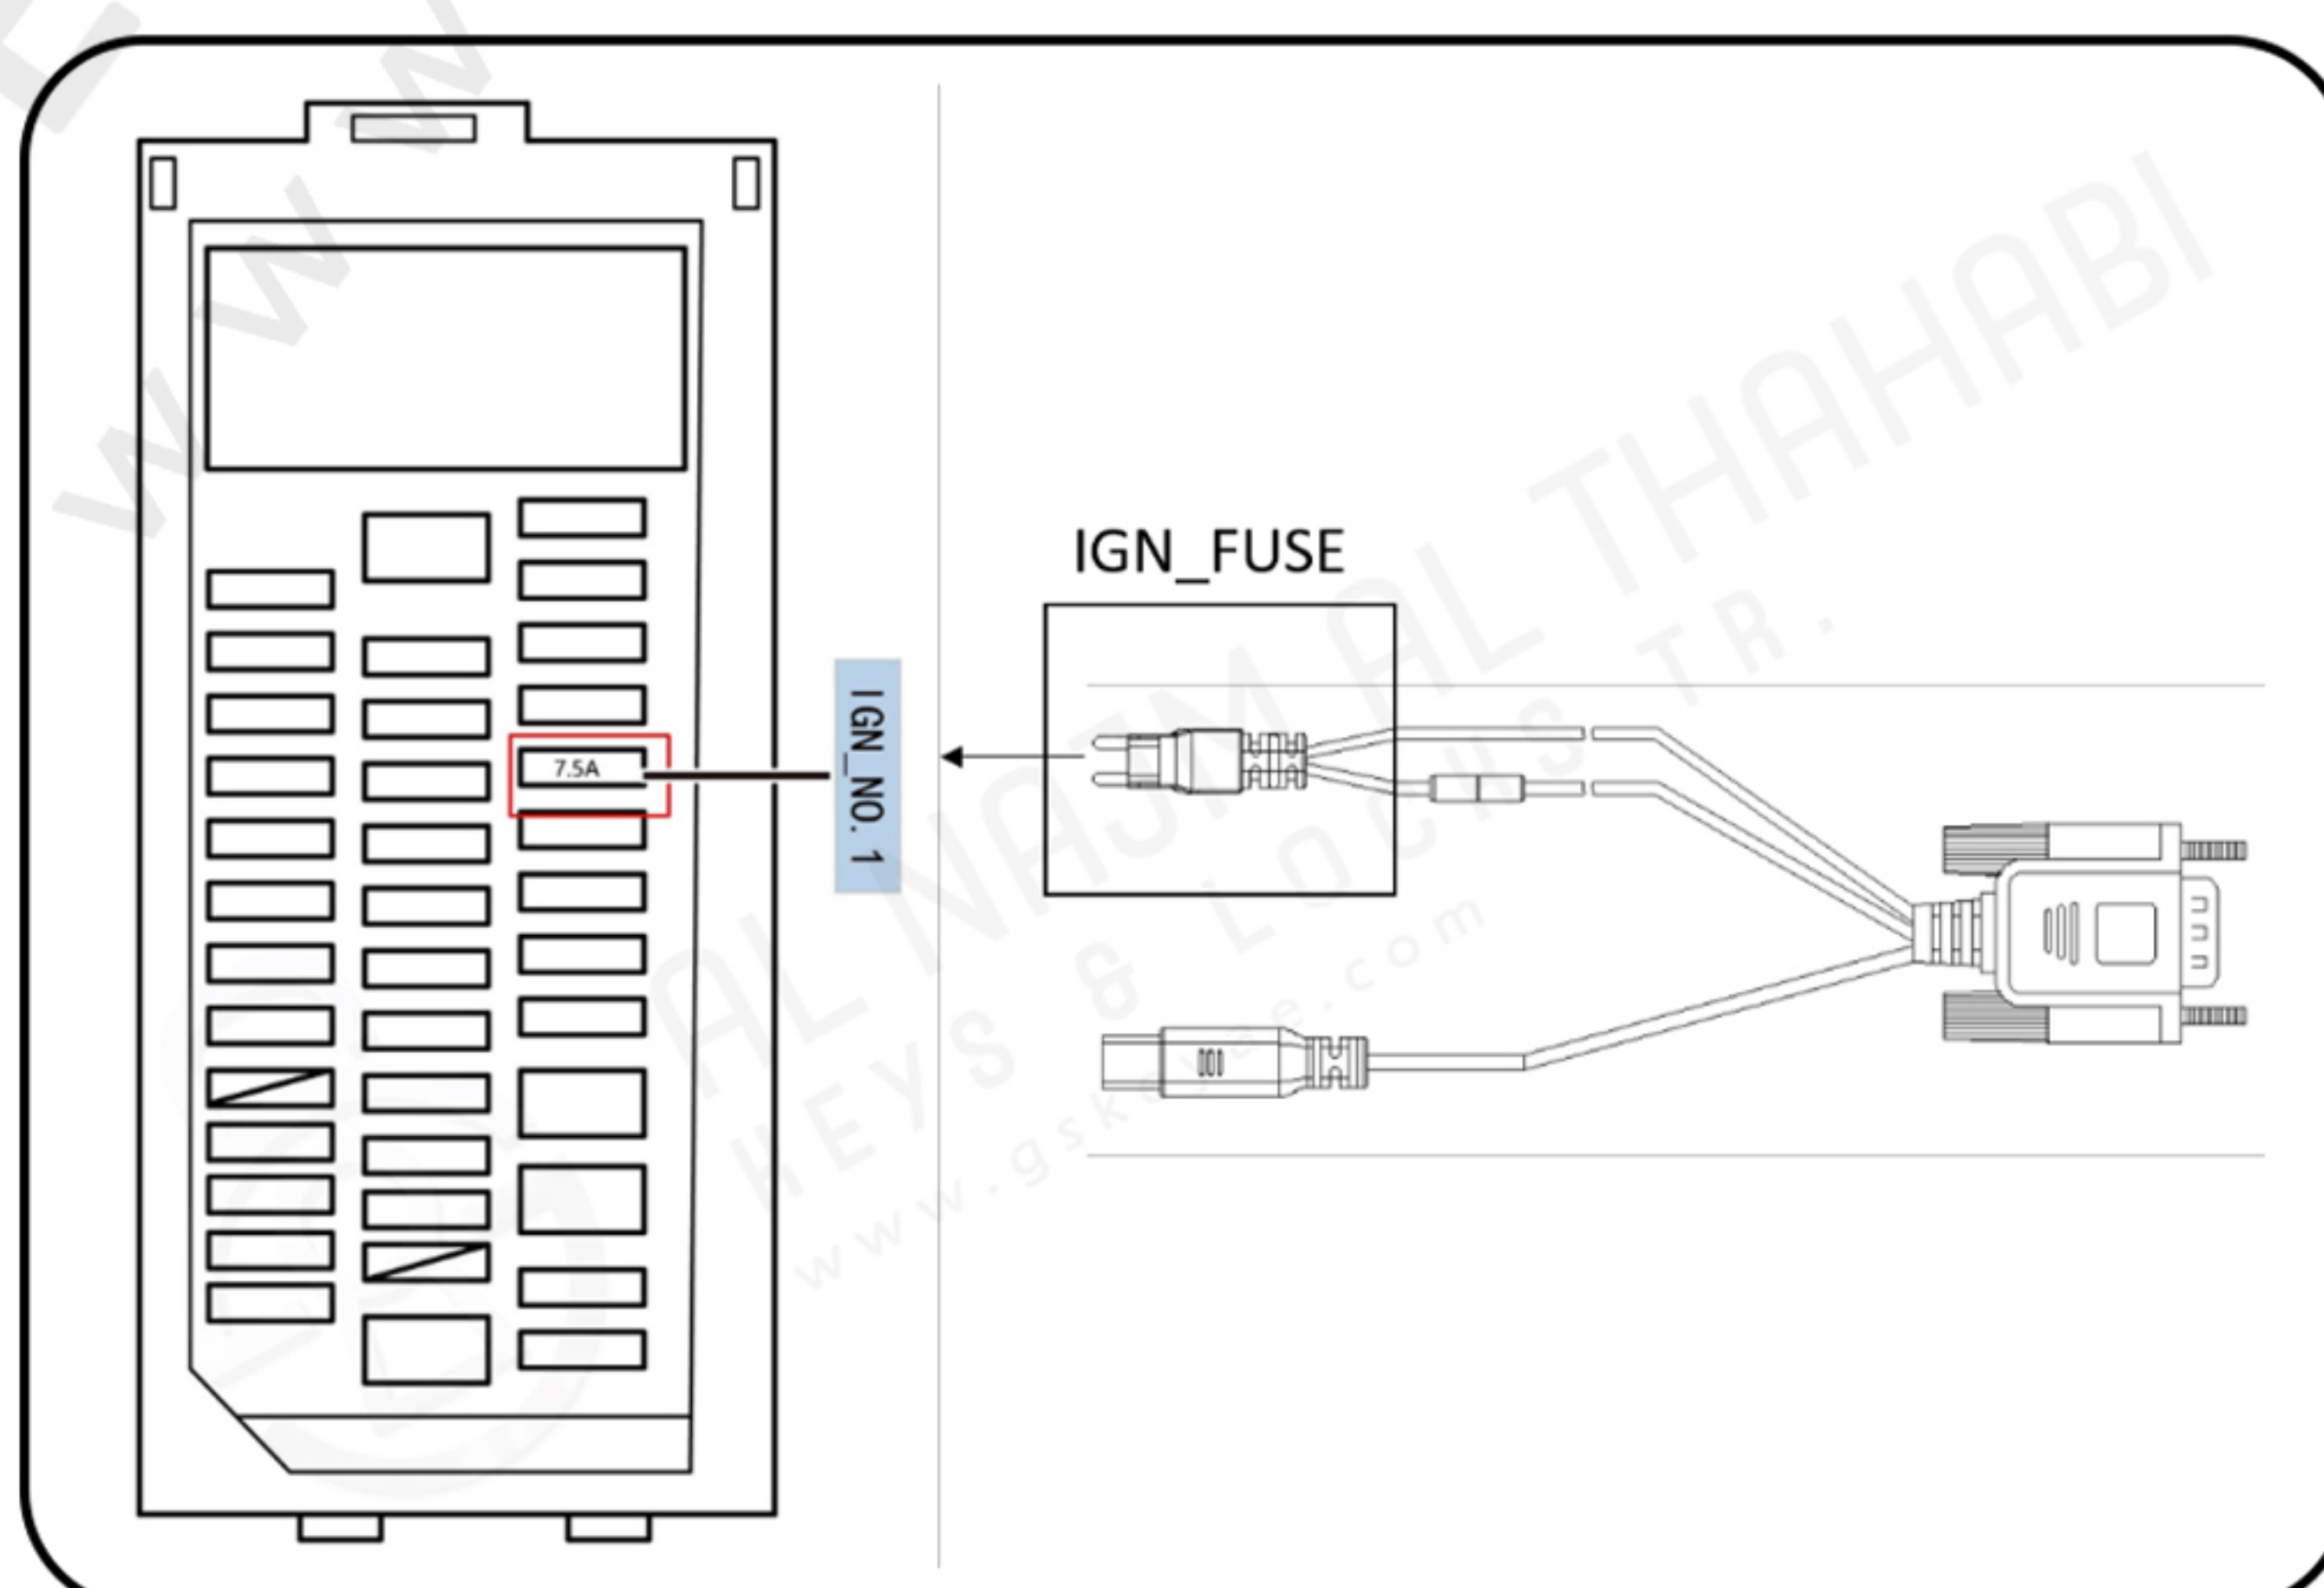


SCAN ME



2 - Find the fuse box near the vehicle's DLC, remove the IGN_NO.1 fuse from the designated fuse slot (see the picture below) on the fuse box, and connect the IGN FUSE to this fuse slot.

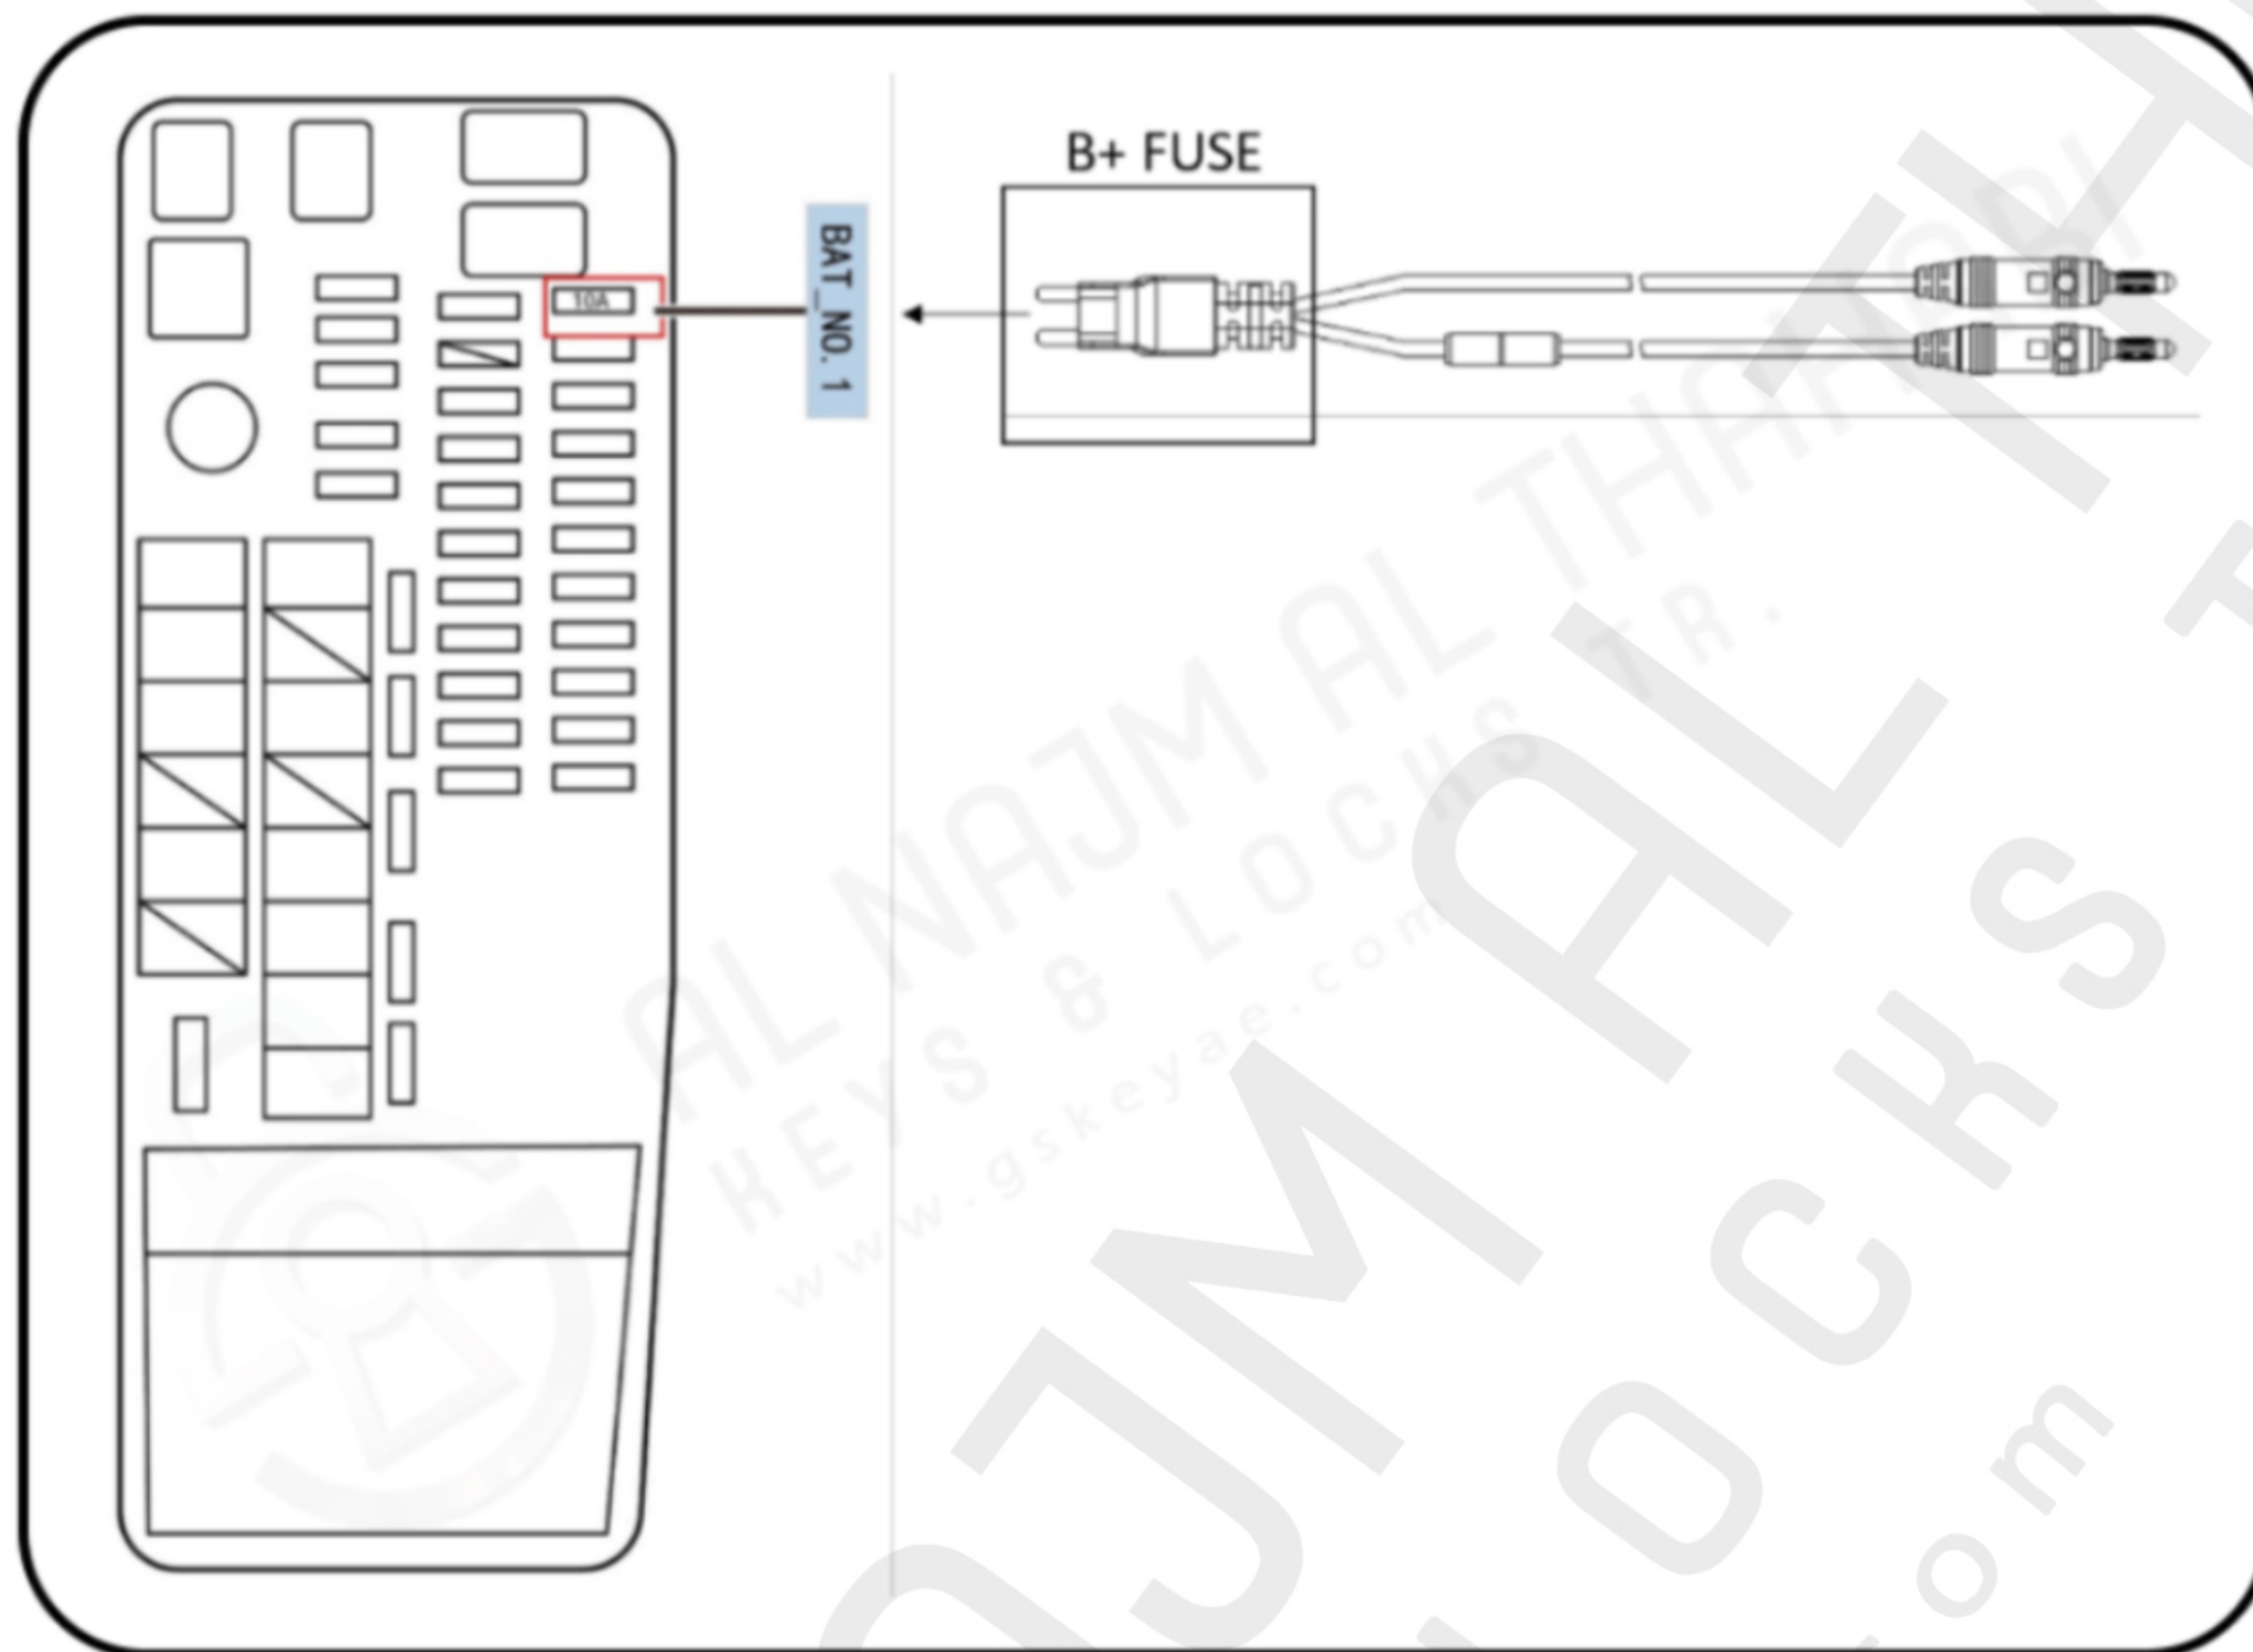


3 - Open the hood, find the fuse box in the engine compartment. Remove the BAT_NO.1 fuse from the designated fuse slot (see the picture below) on the fuse box, and connect the B+ FUSE to this slot.

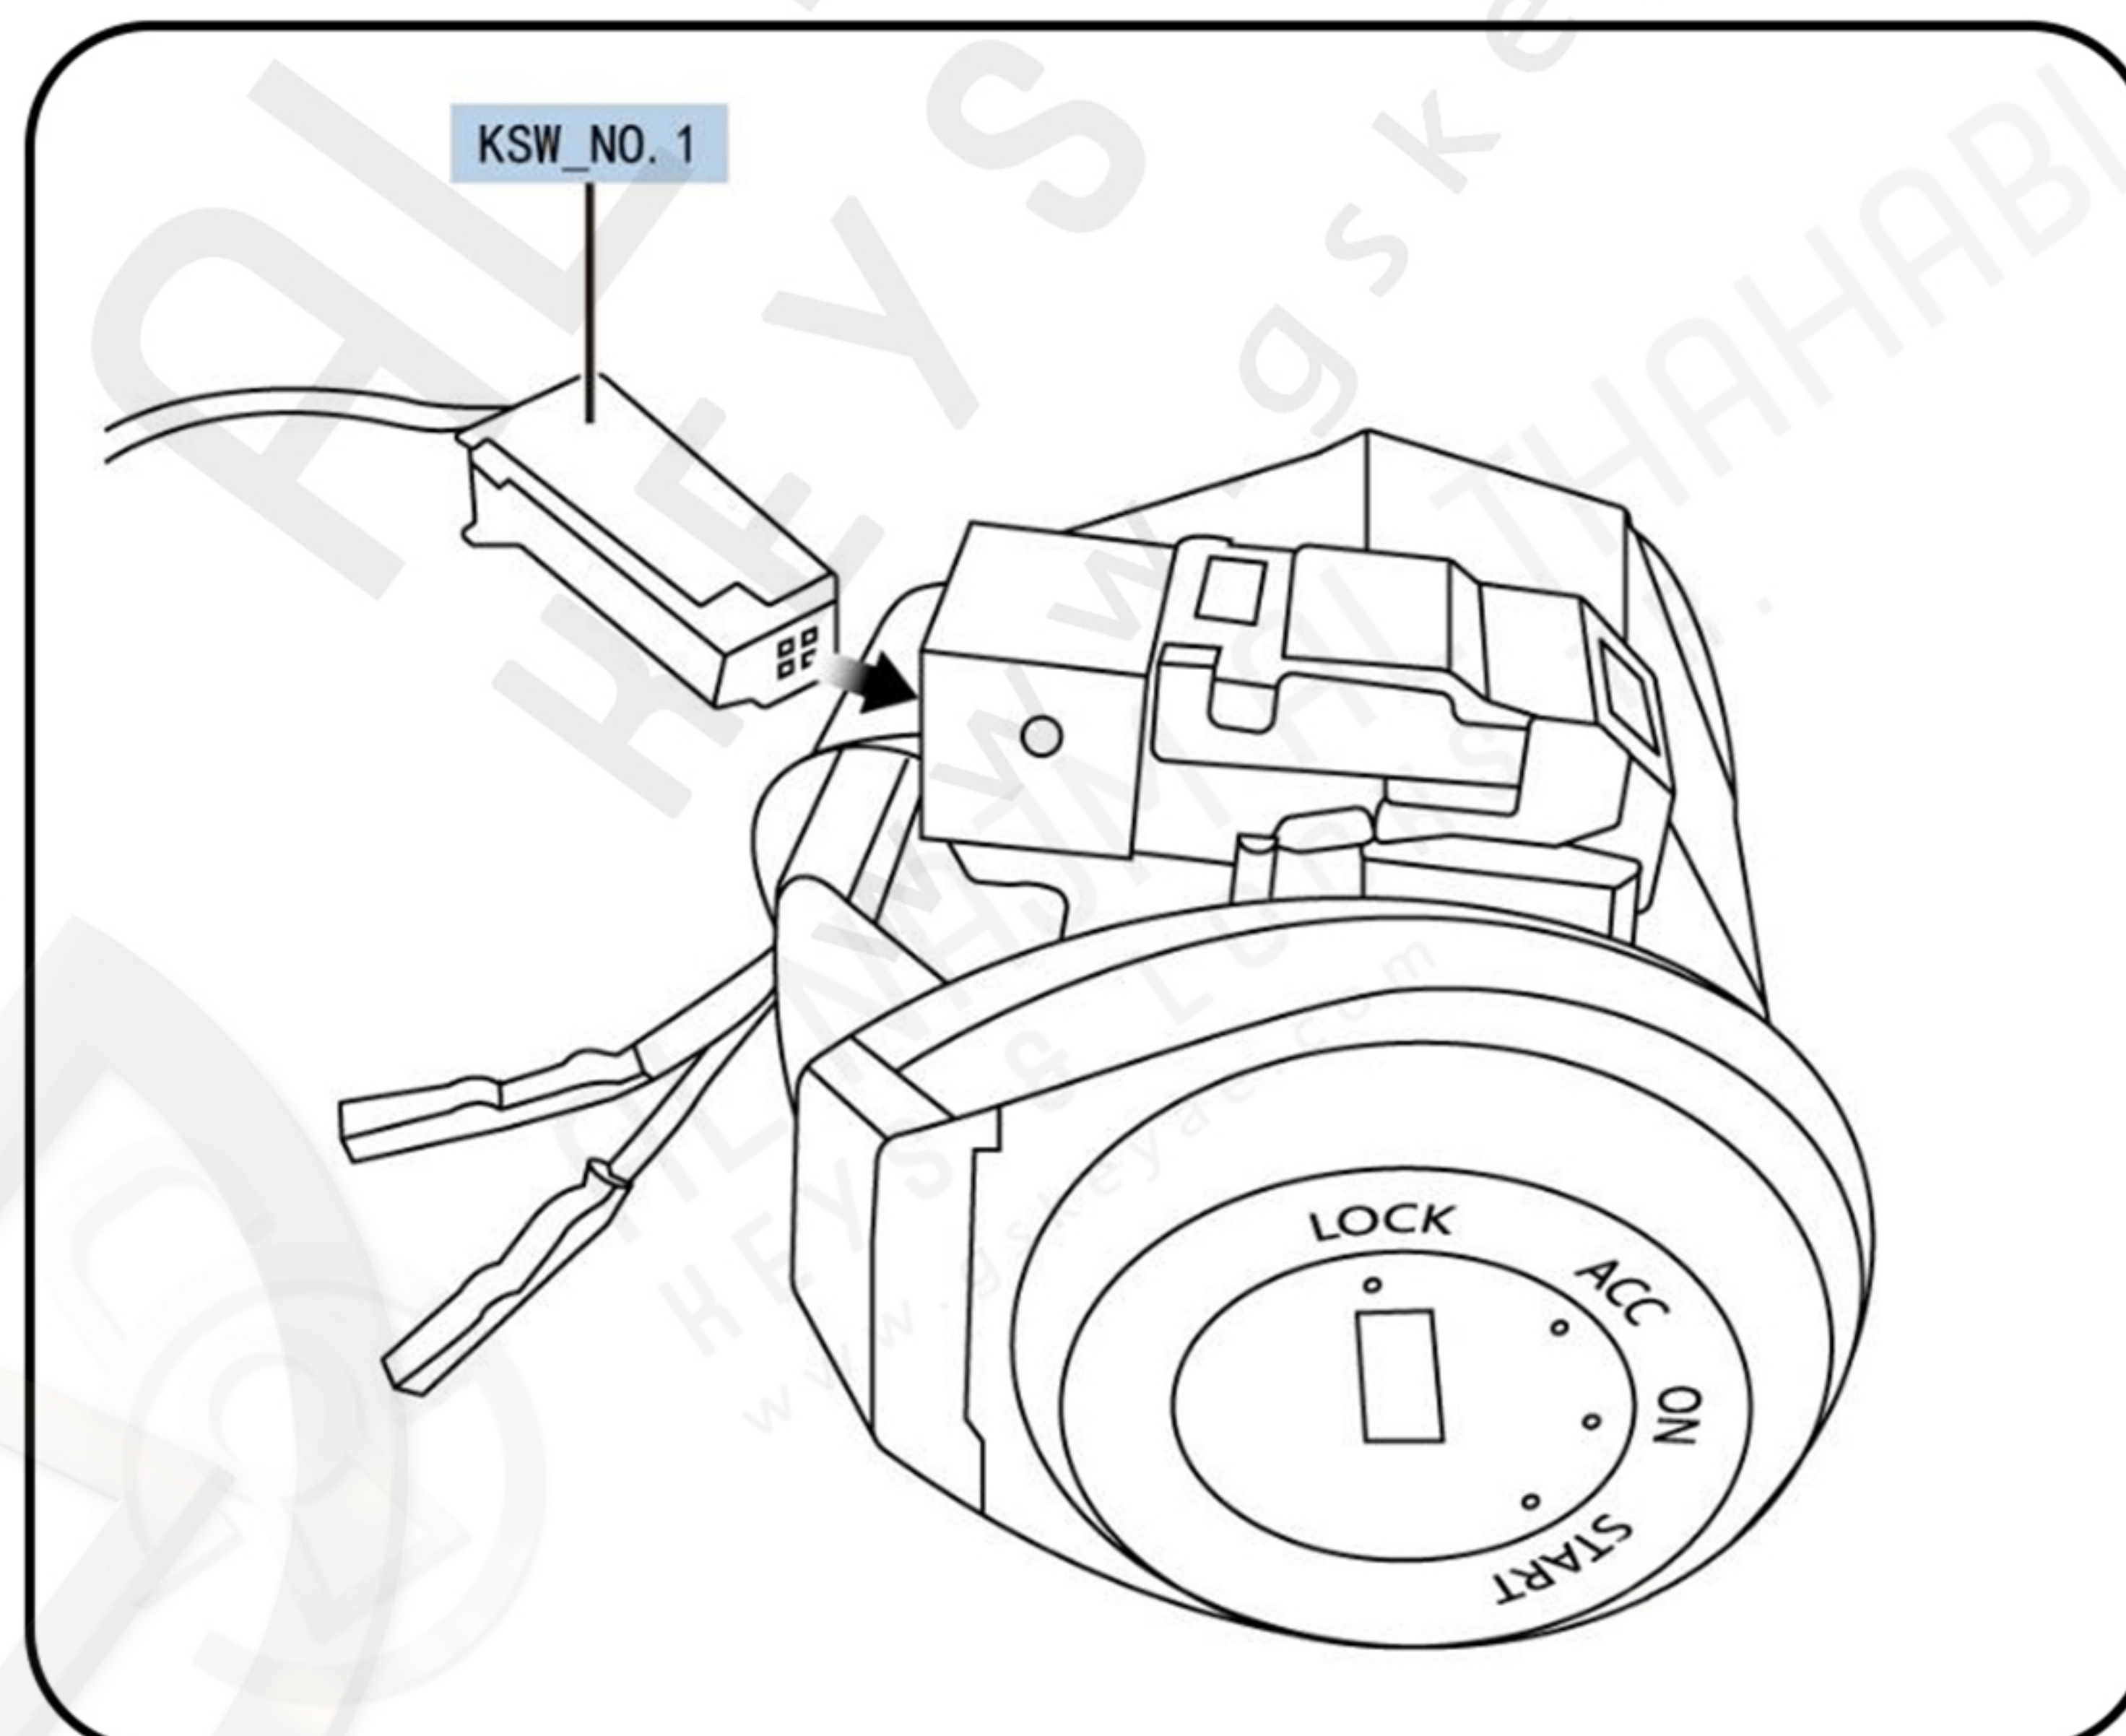


SCAN ME



4 - Remove the steering wheel cover, pull out the KSW_NO.1 ignition switch wire harness as shown below and connect the KSW wire harness to the ignition coil.

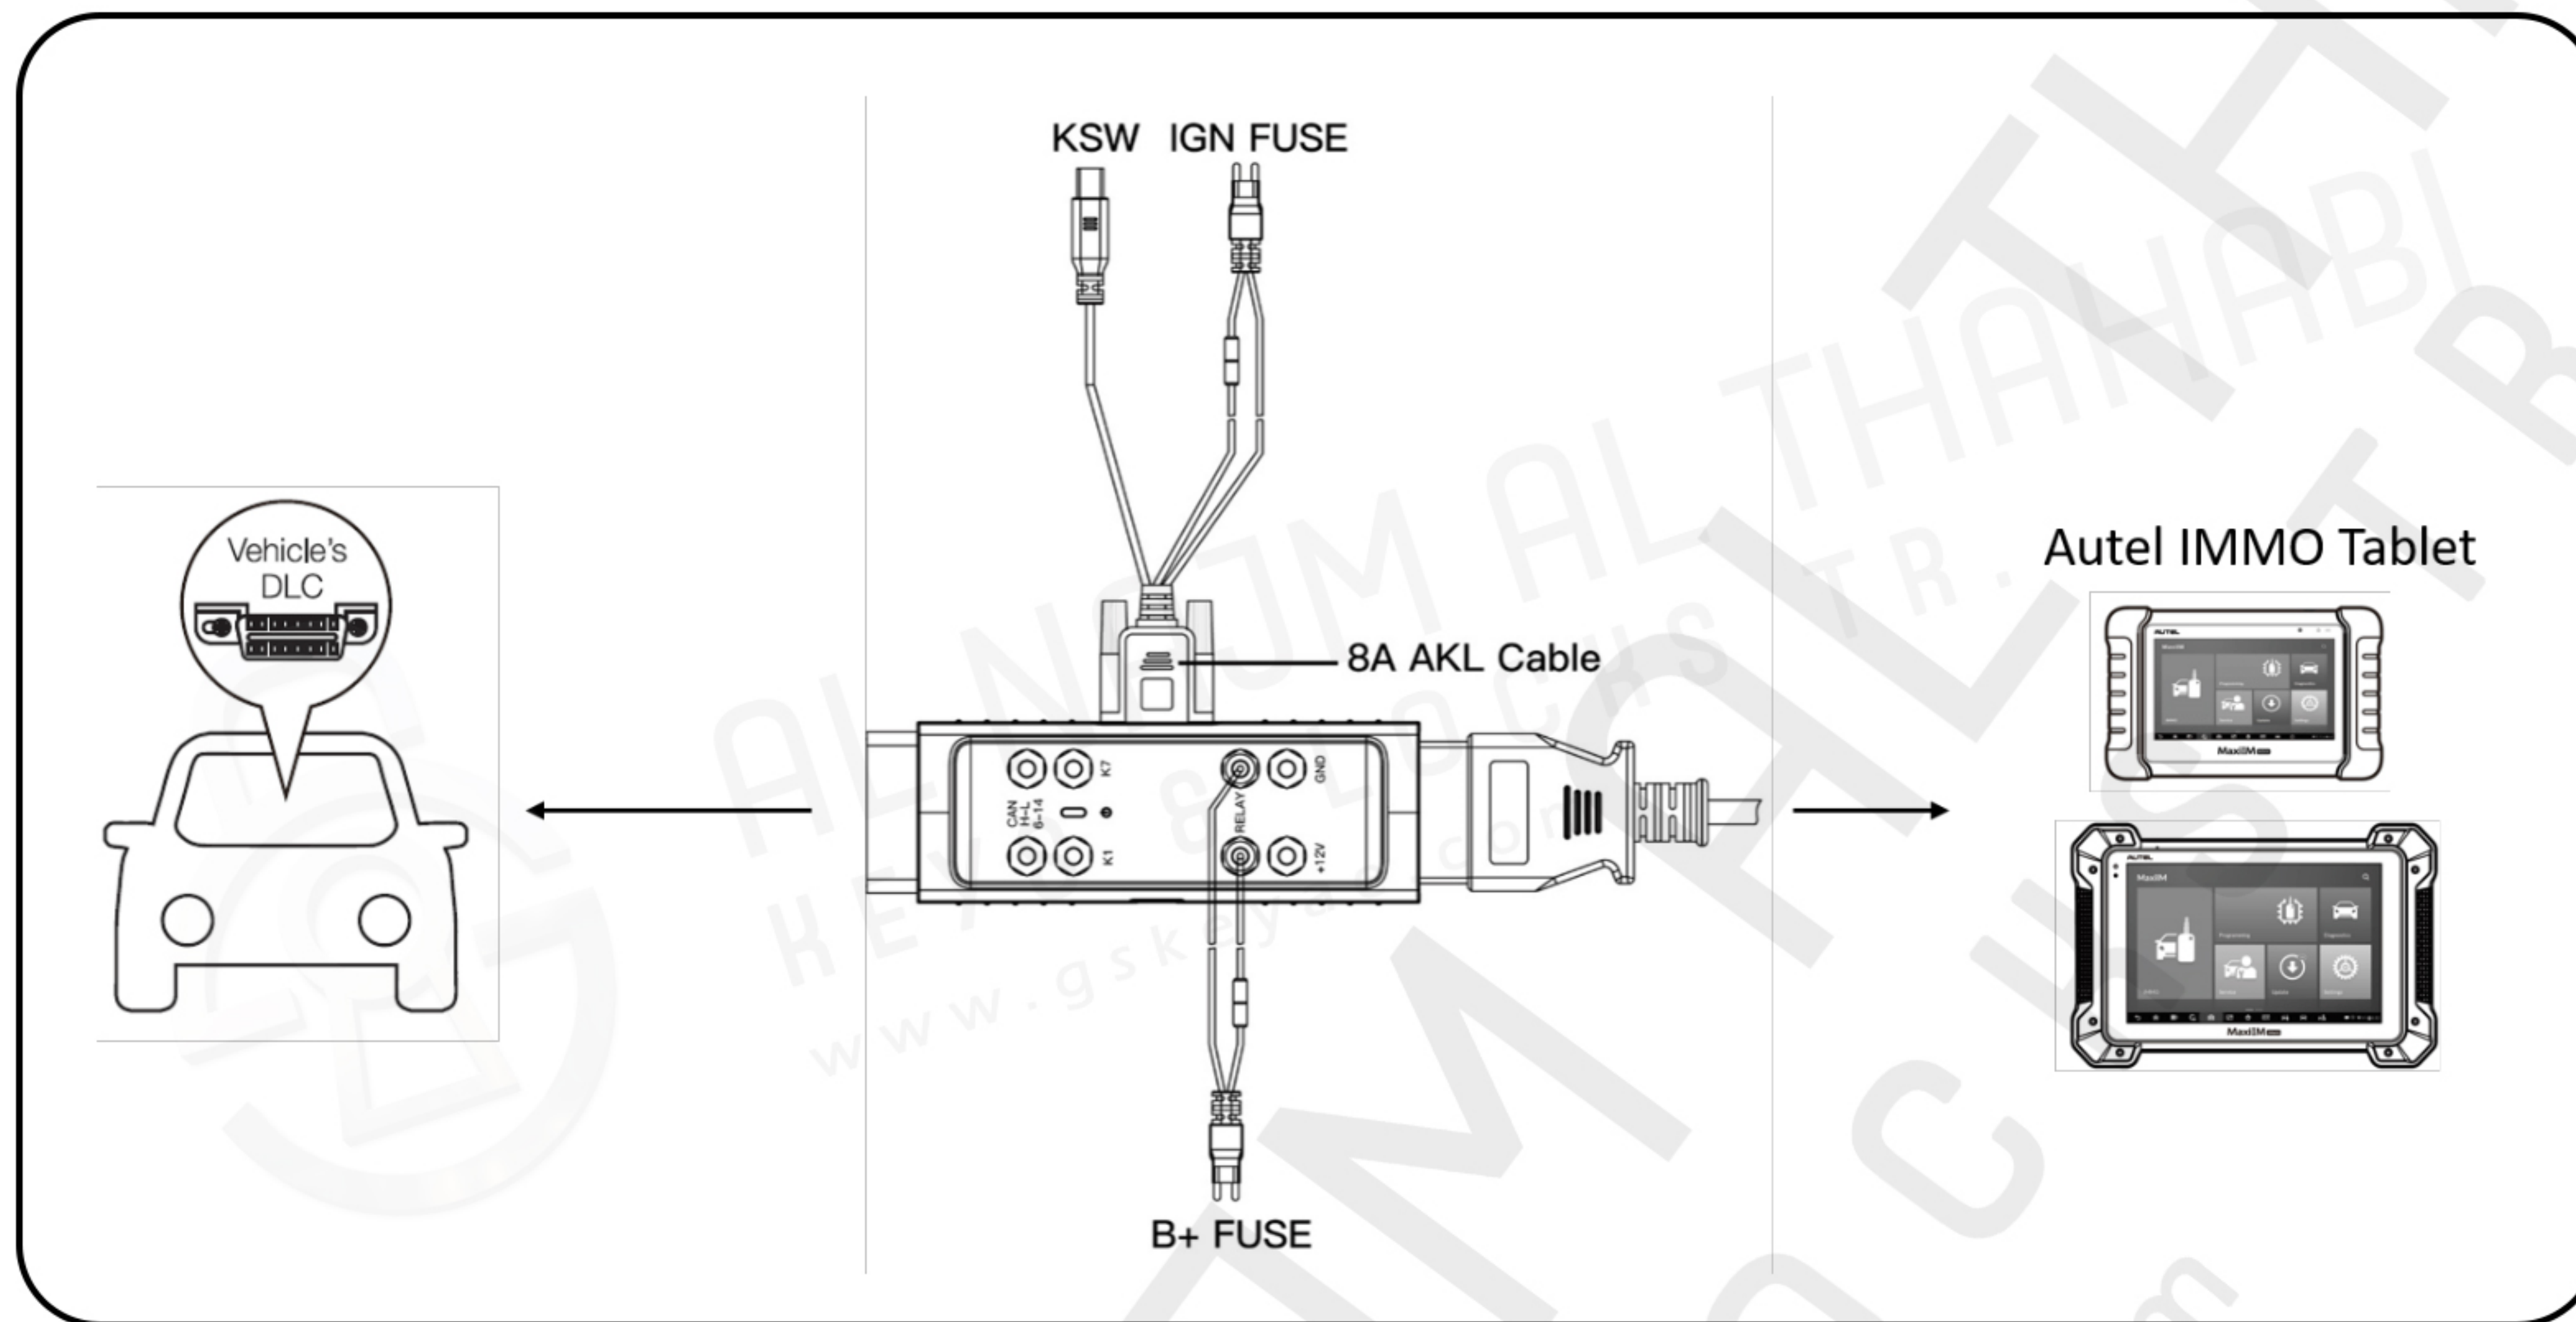


5 - Connect the G-BOX to the 8A AKL cable and then to the vehicle's DLC. Tap [OK] on the tablet to continue.

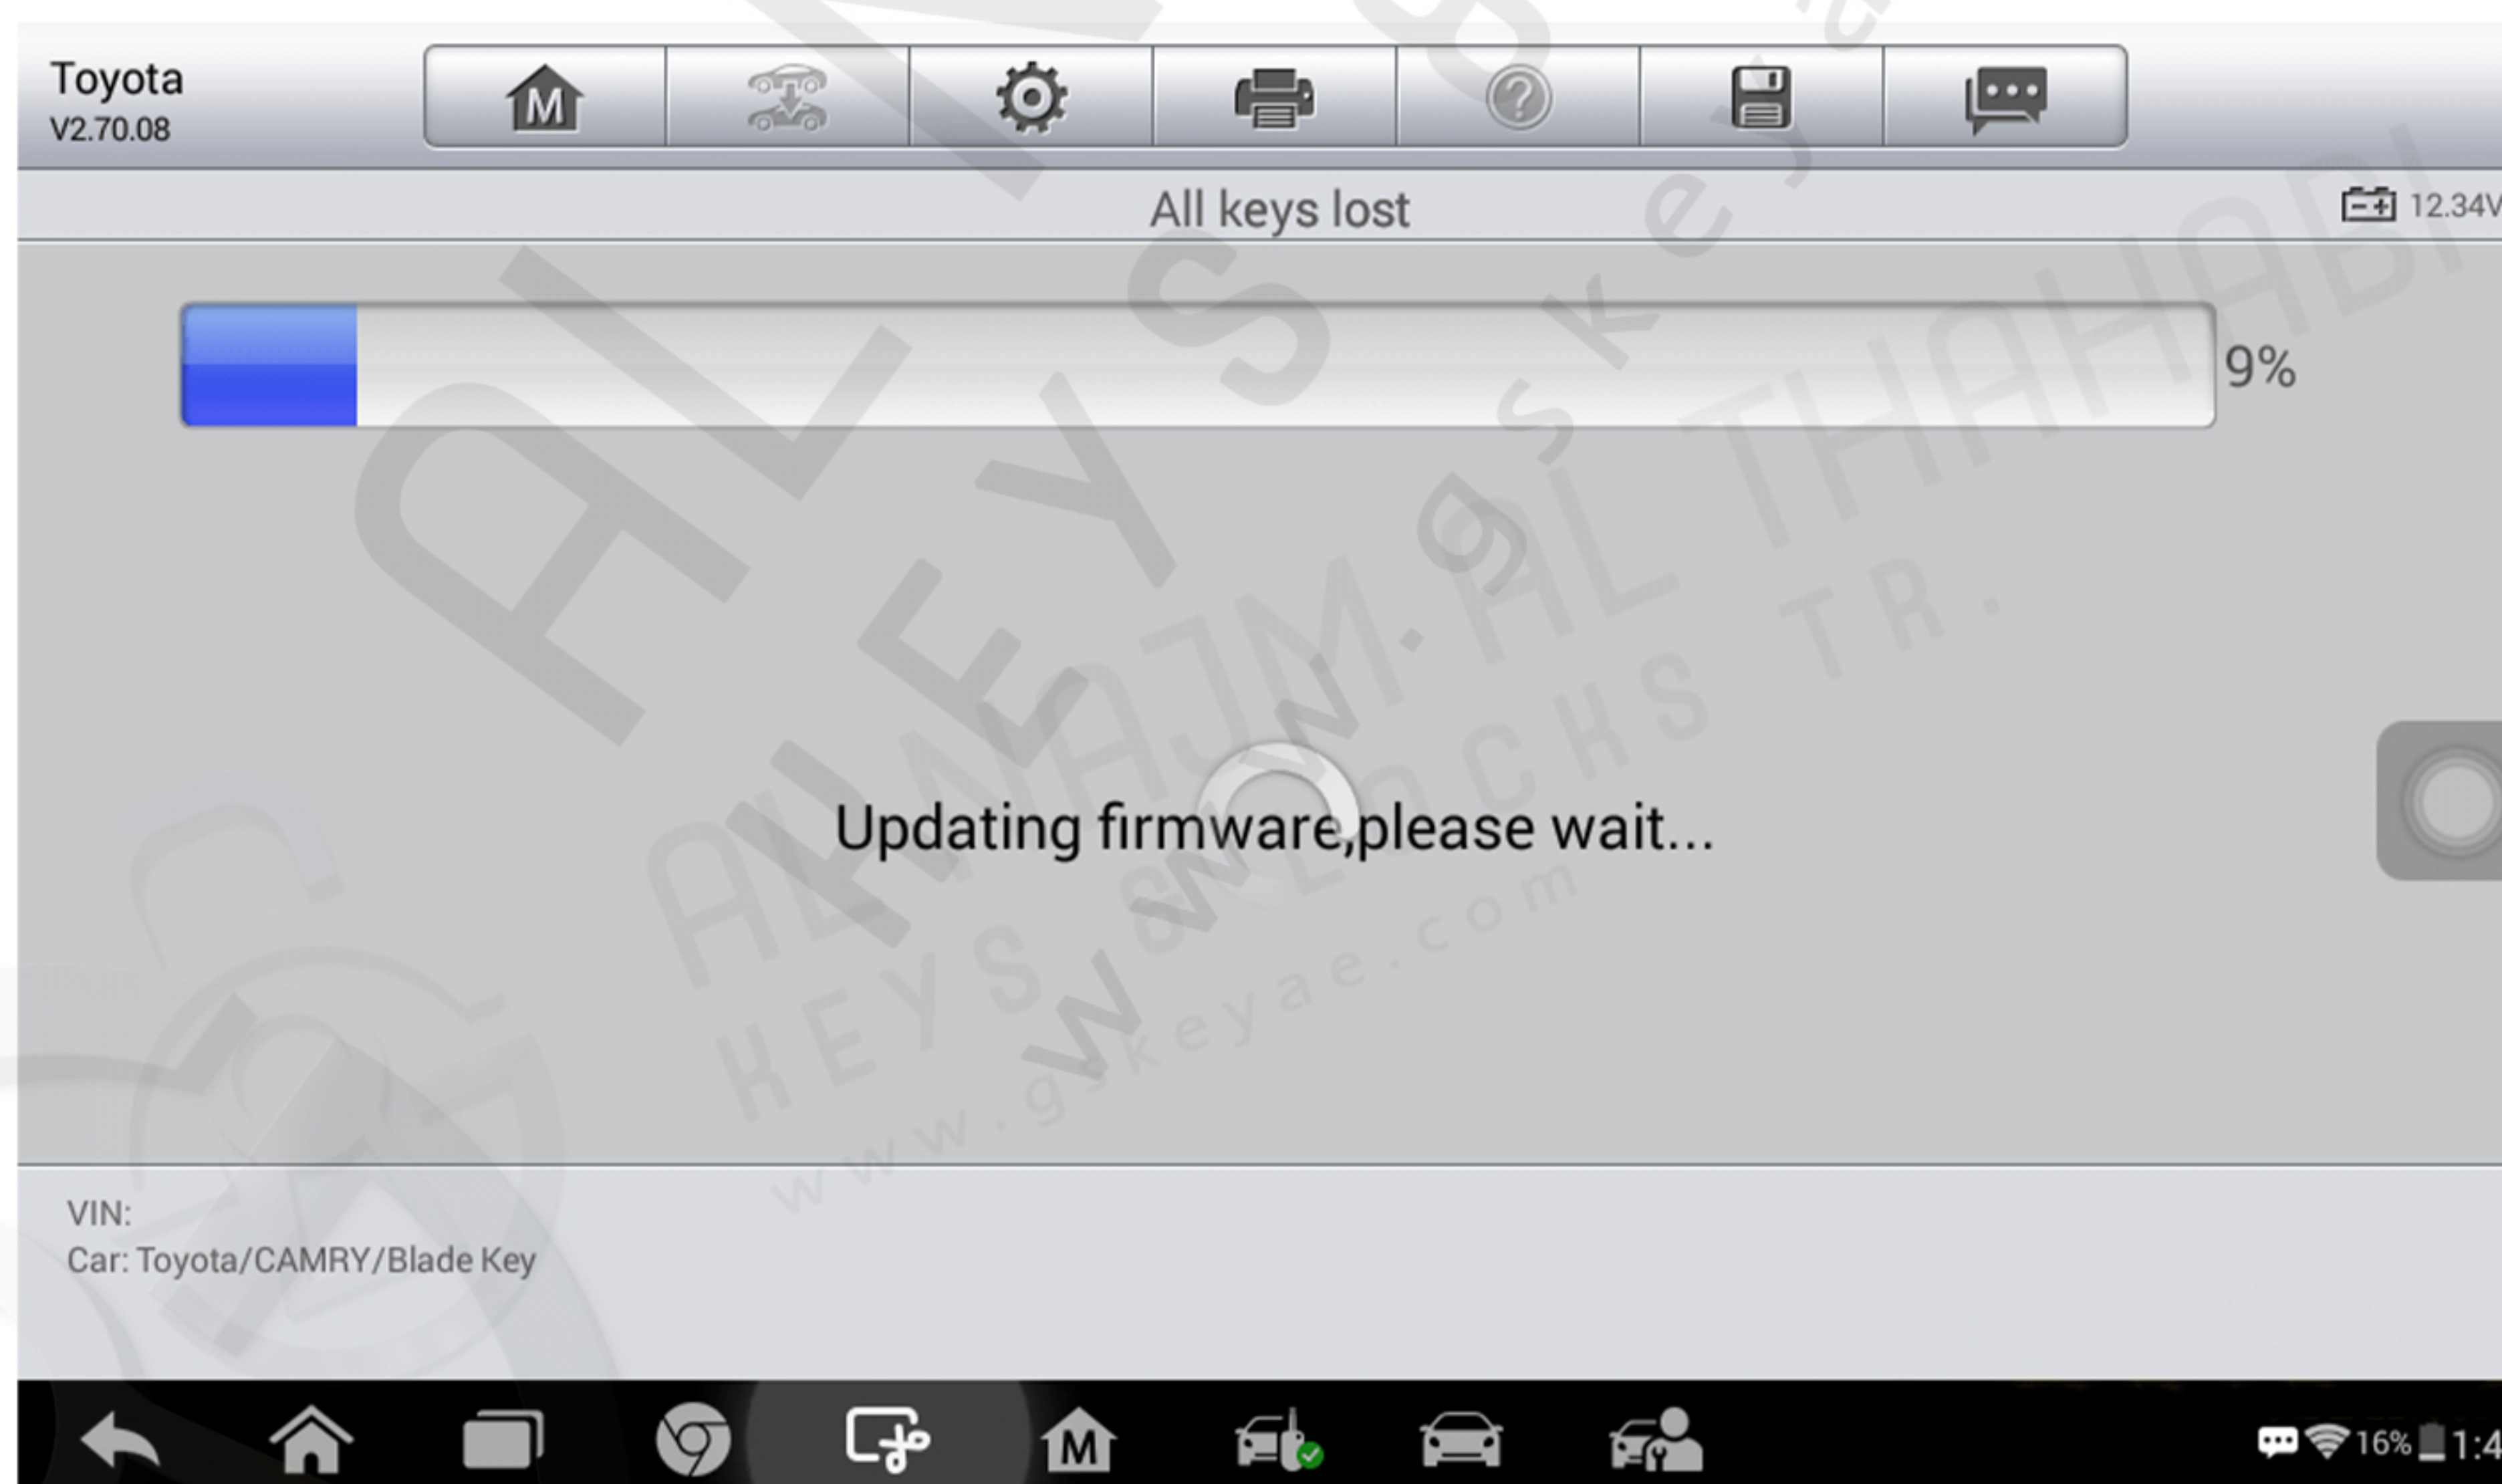


SCAN ME



6 - G-BOX will be automatically updated when connected to the tablet for the first time. The status indicator of G-BOX will flash red during updating process, and light green after update succeeds.

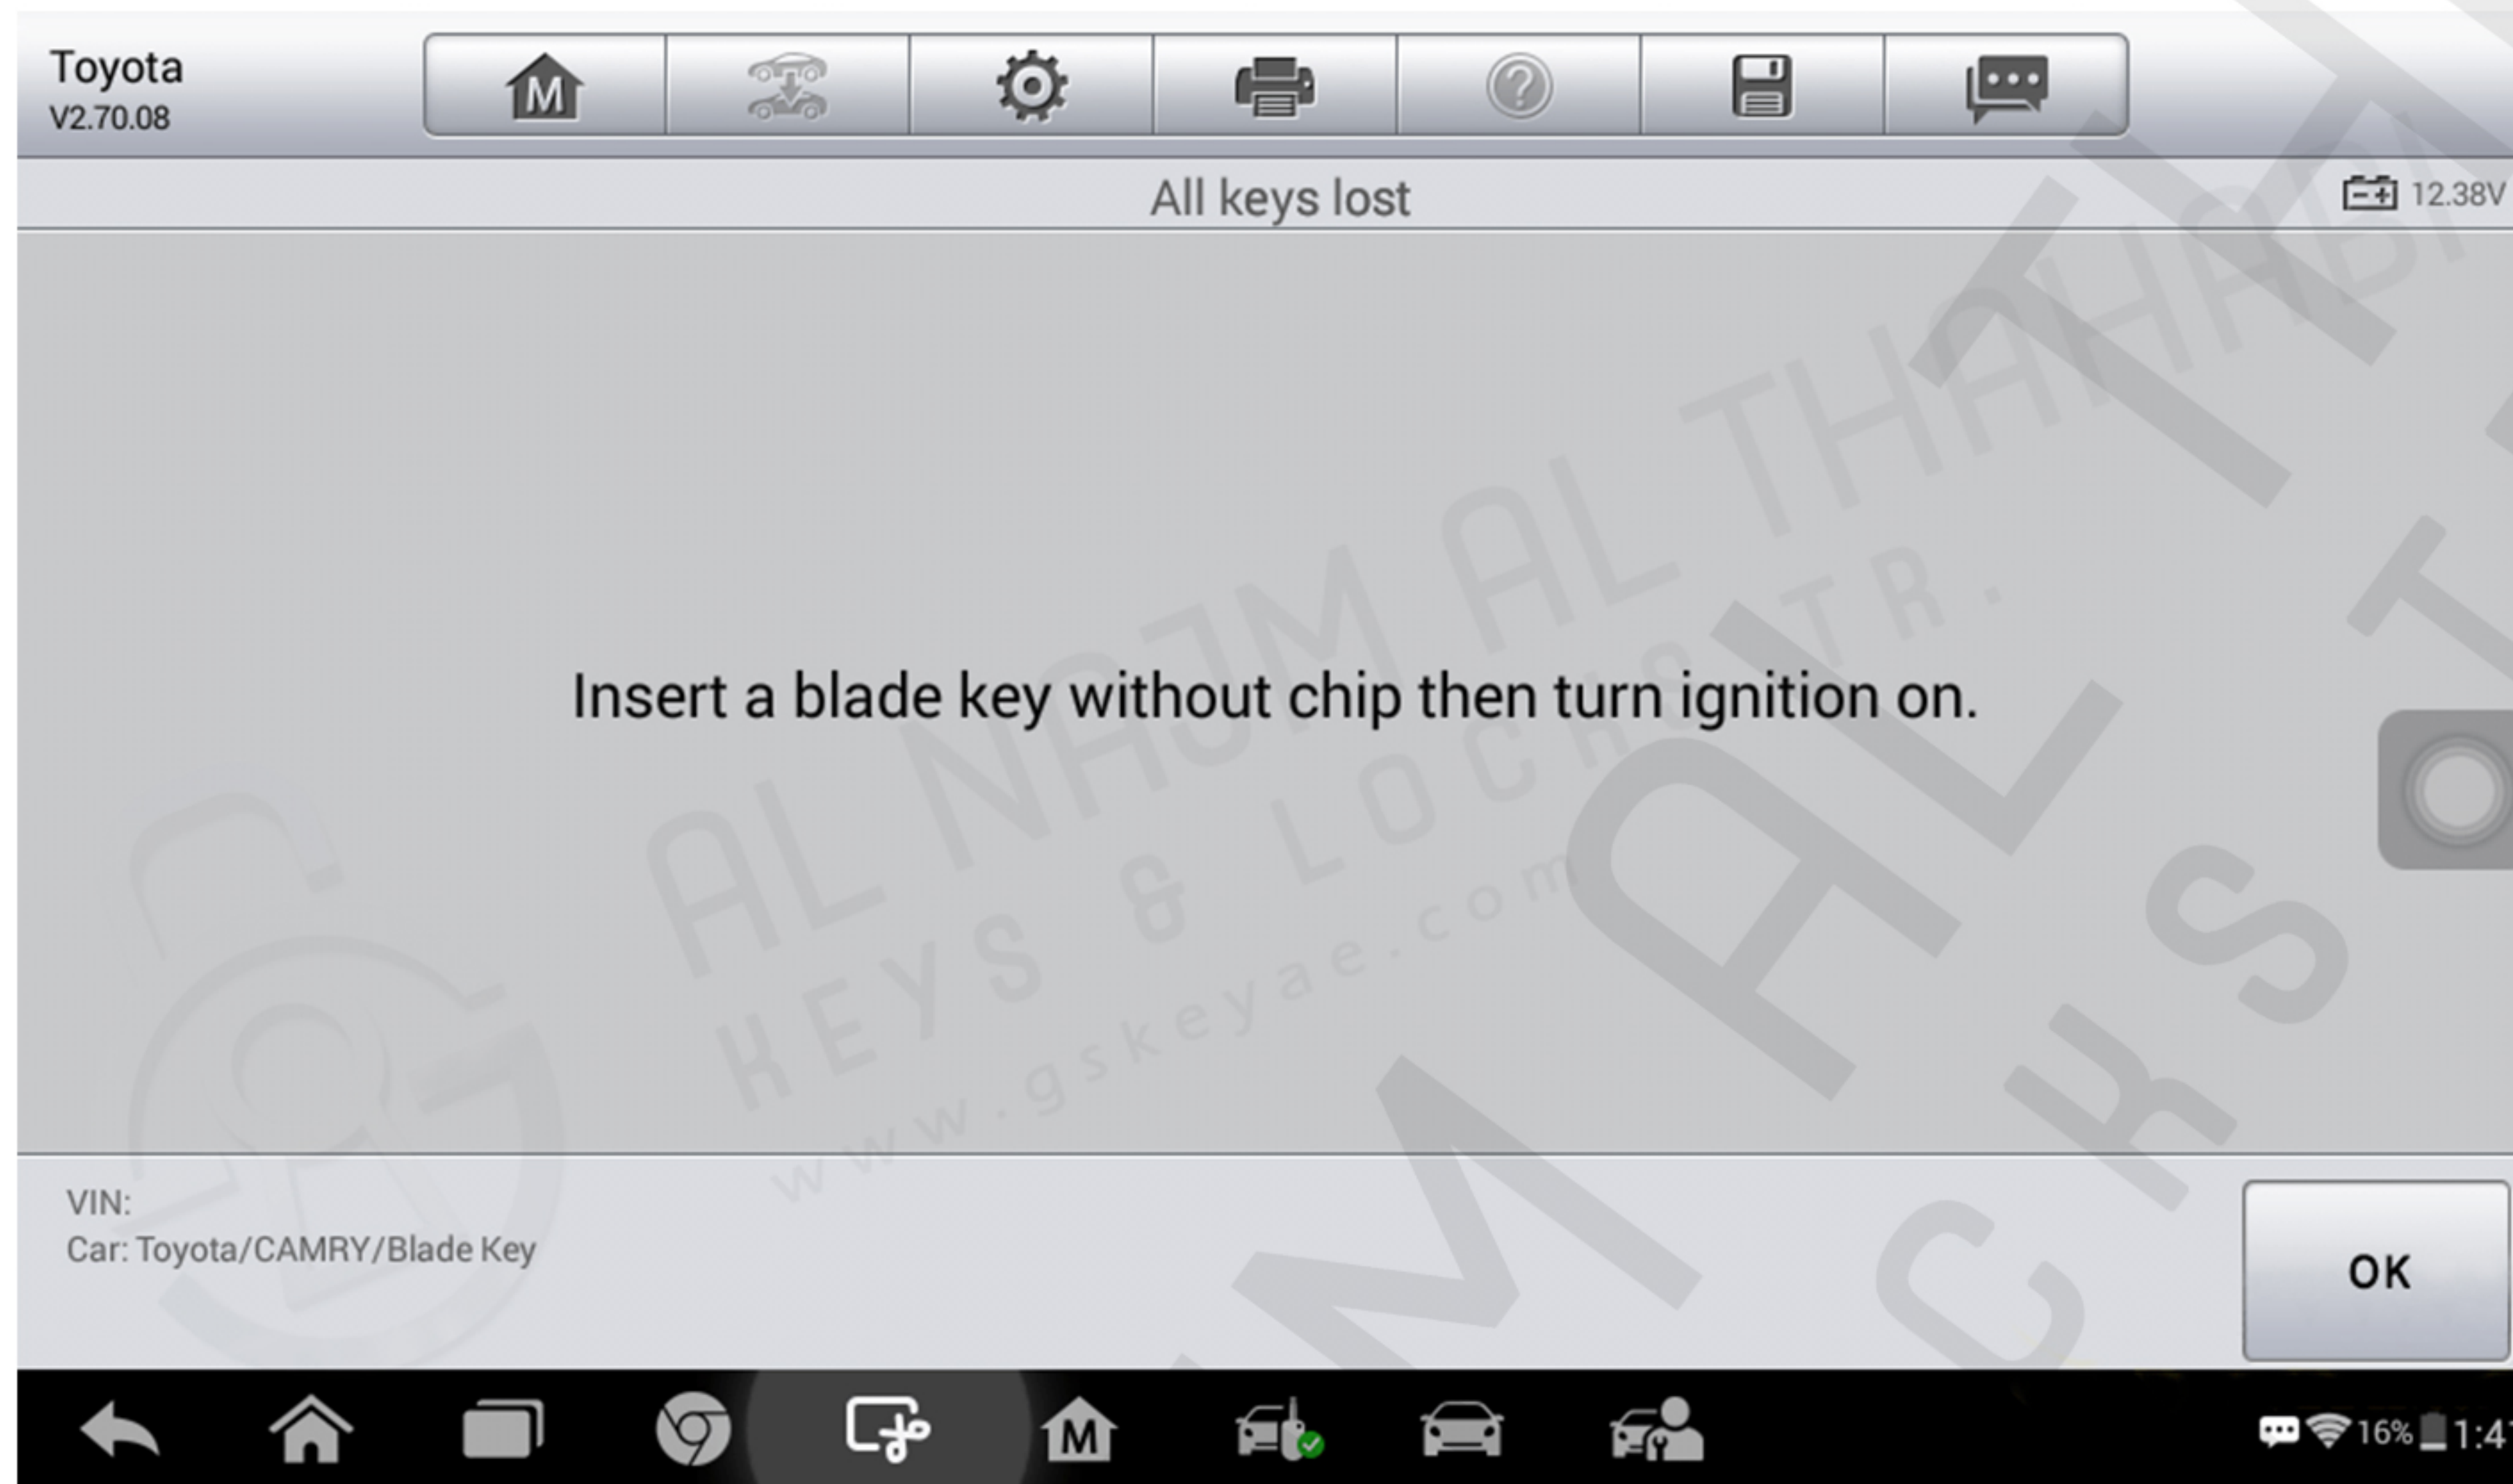


7 - Insert a blade key (without chip) and turn ON the ignition.

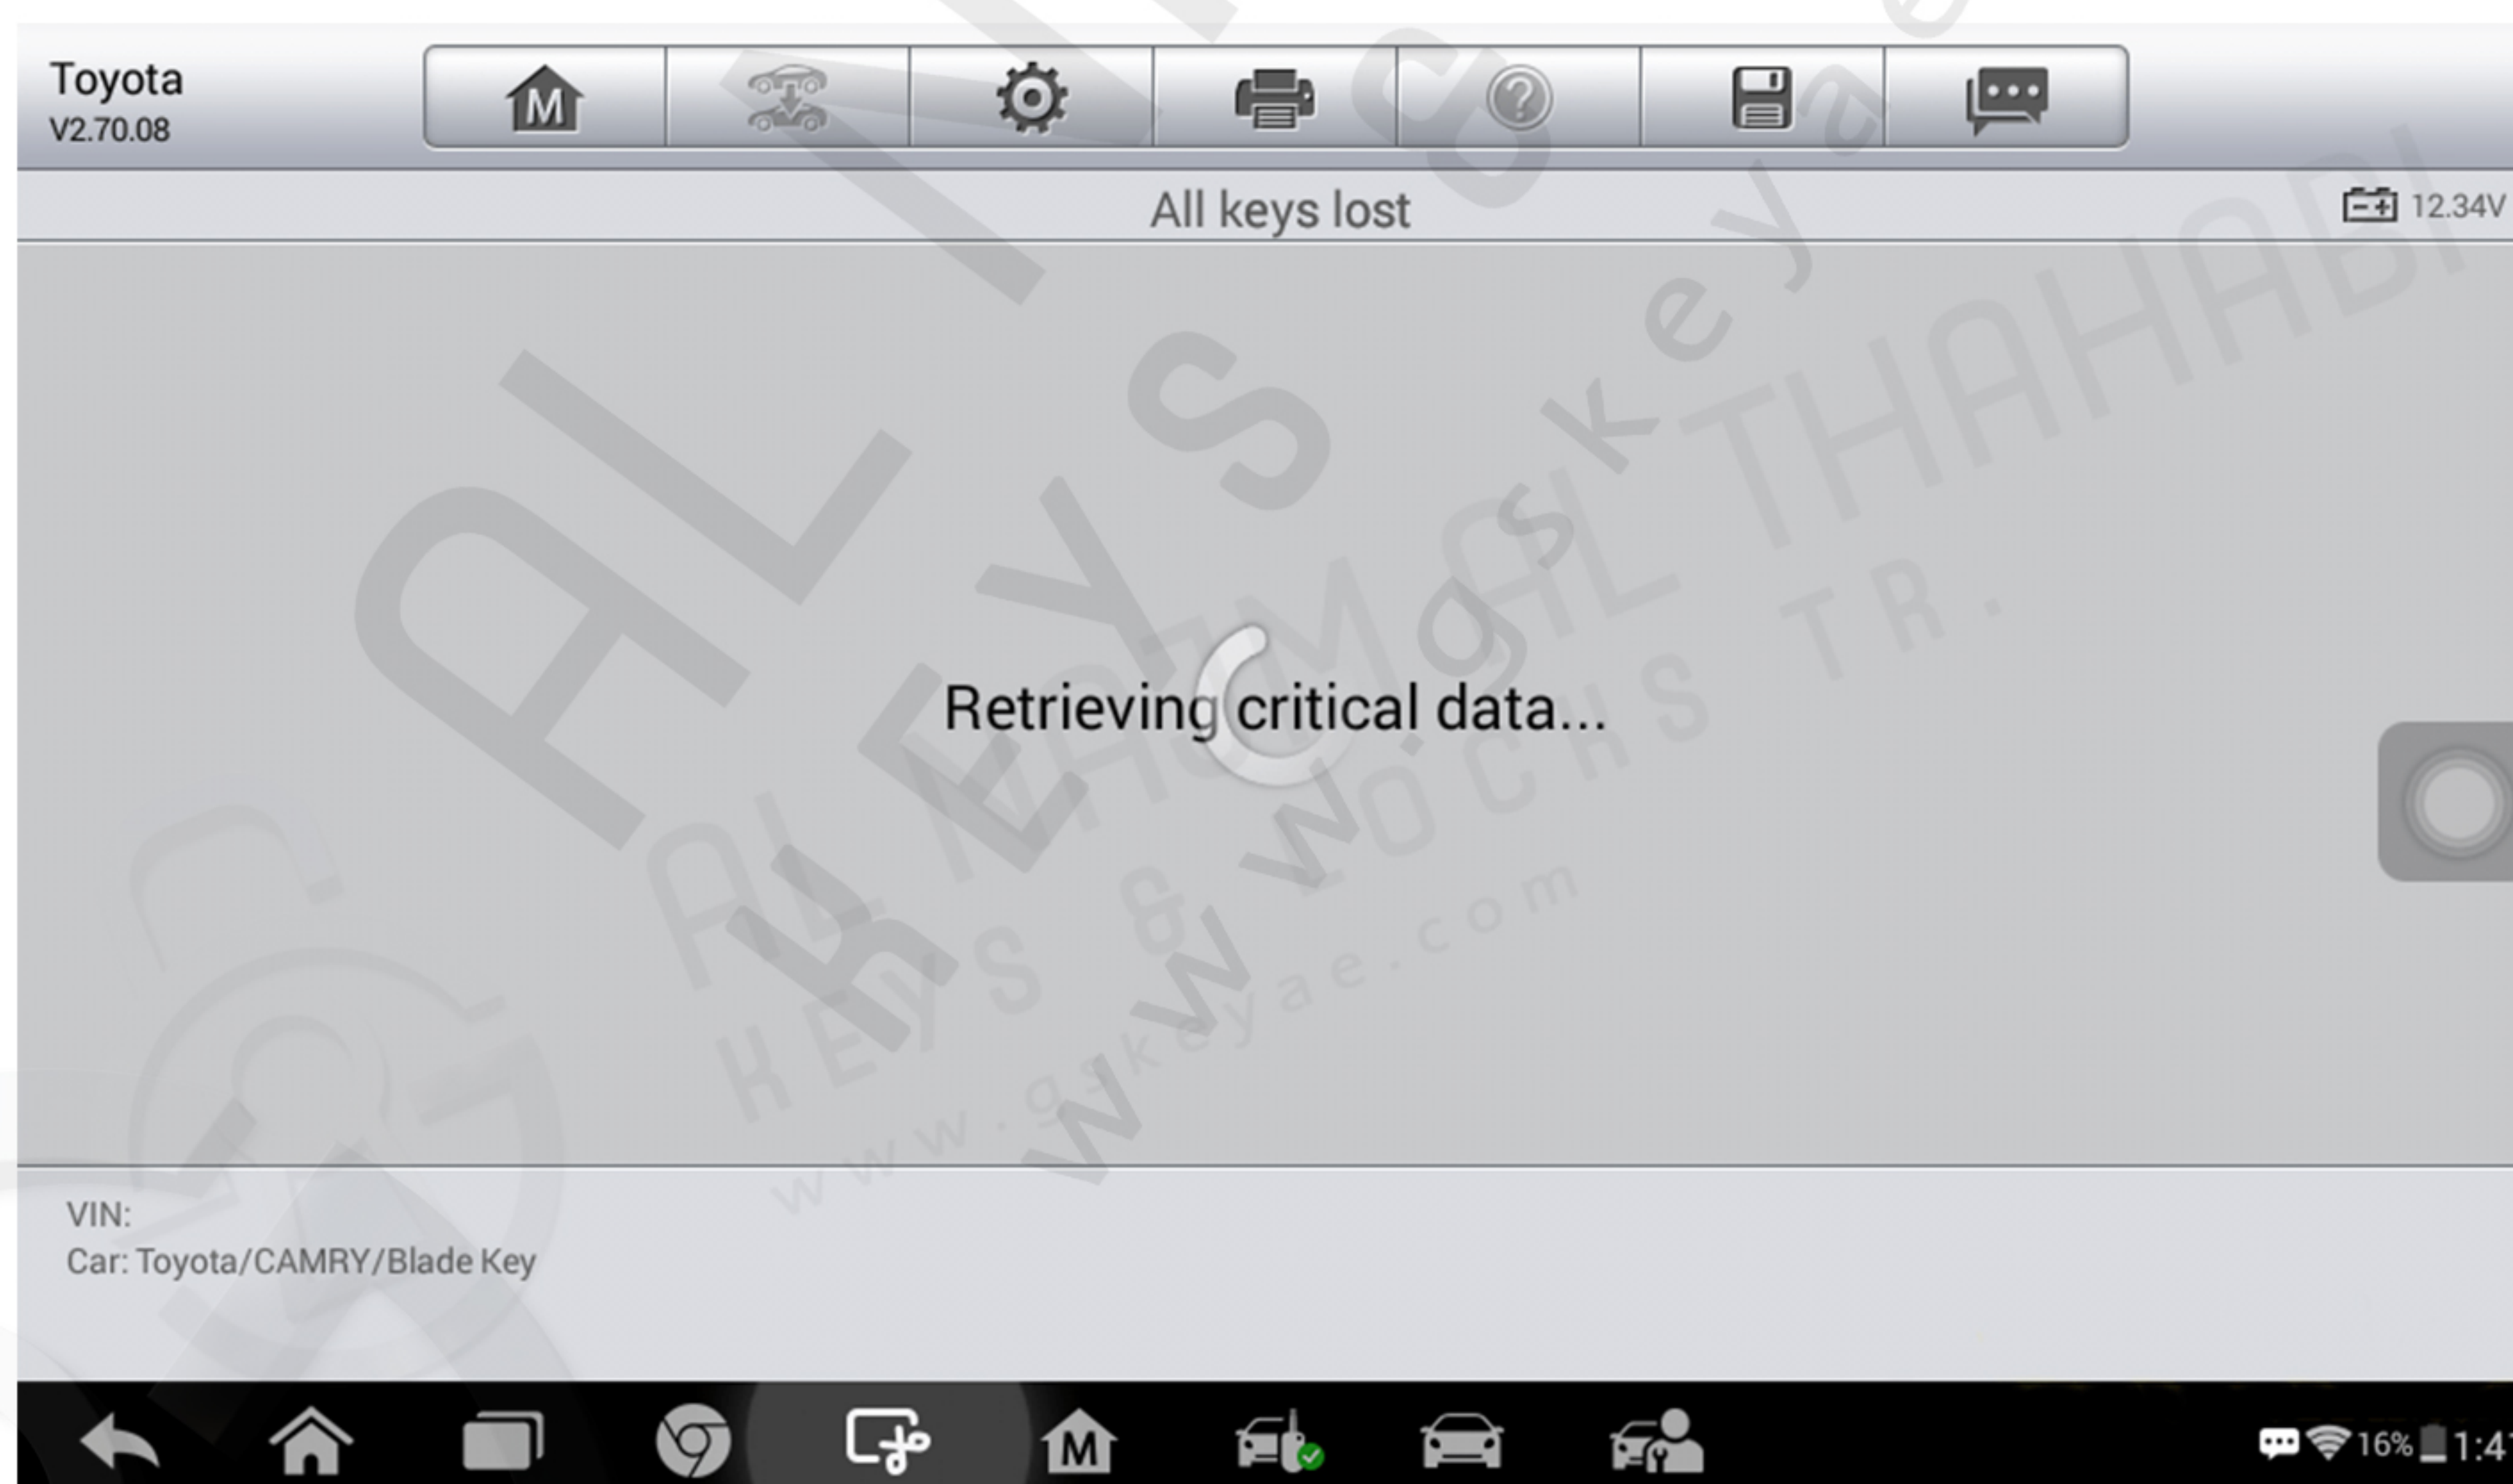


SCAN ME



8 - Tap [OK] on the tablet to read the critical data. Data reading time varies from several seconds to several minutes, depending on the specific vehicles

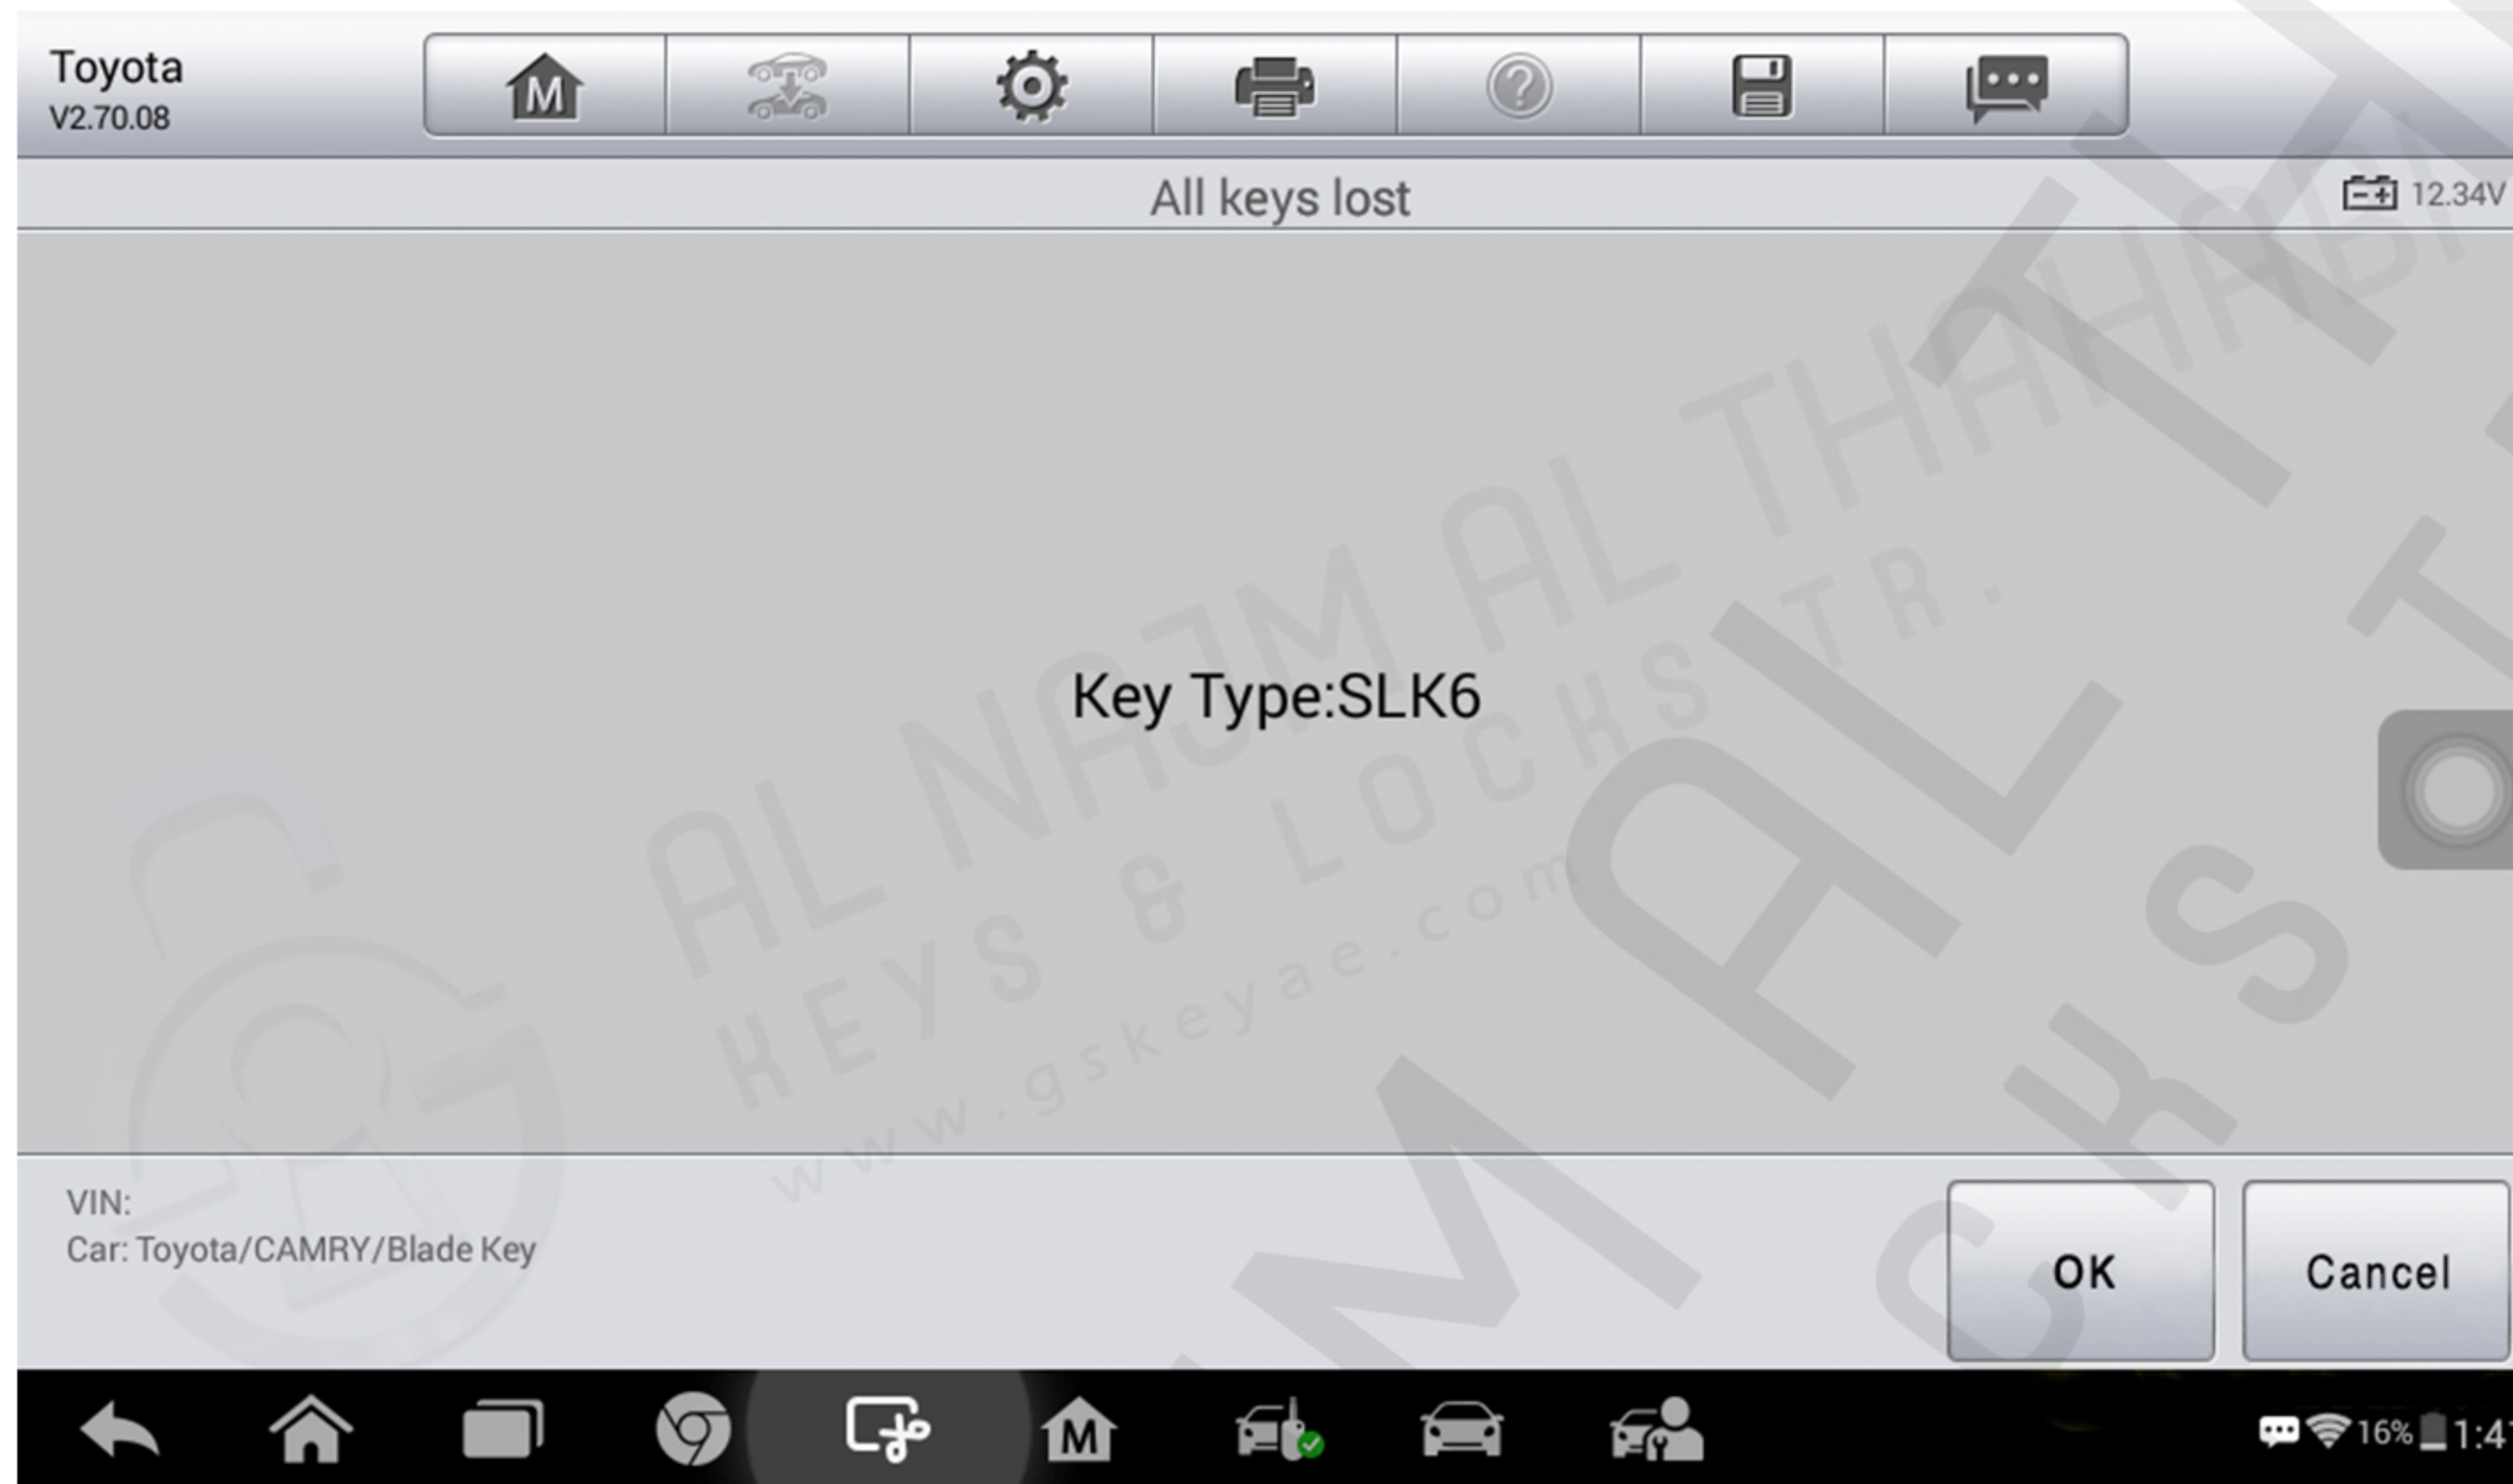

9 - Tap [OK] to confirm the key type (SLK6) displayed on the screen

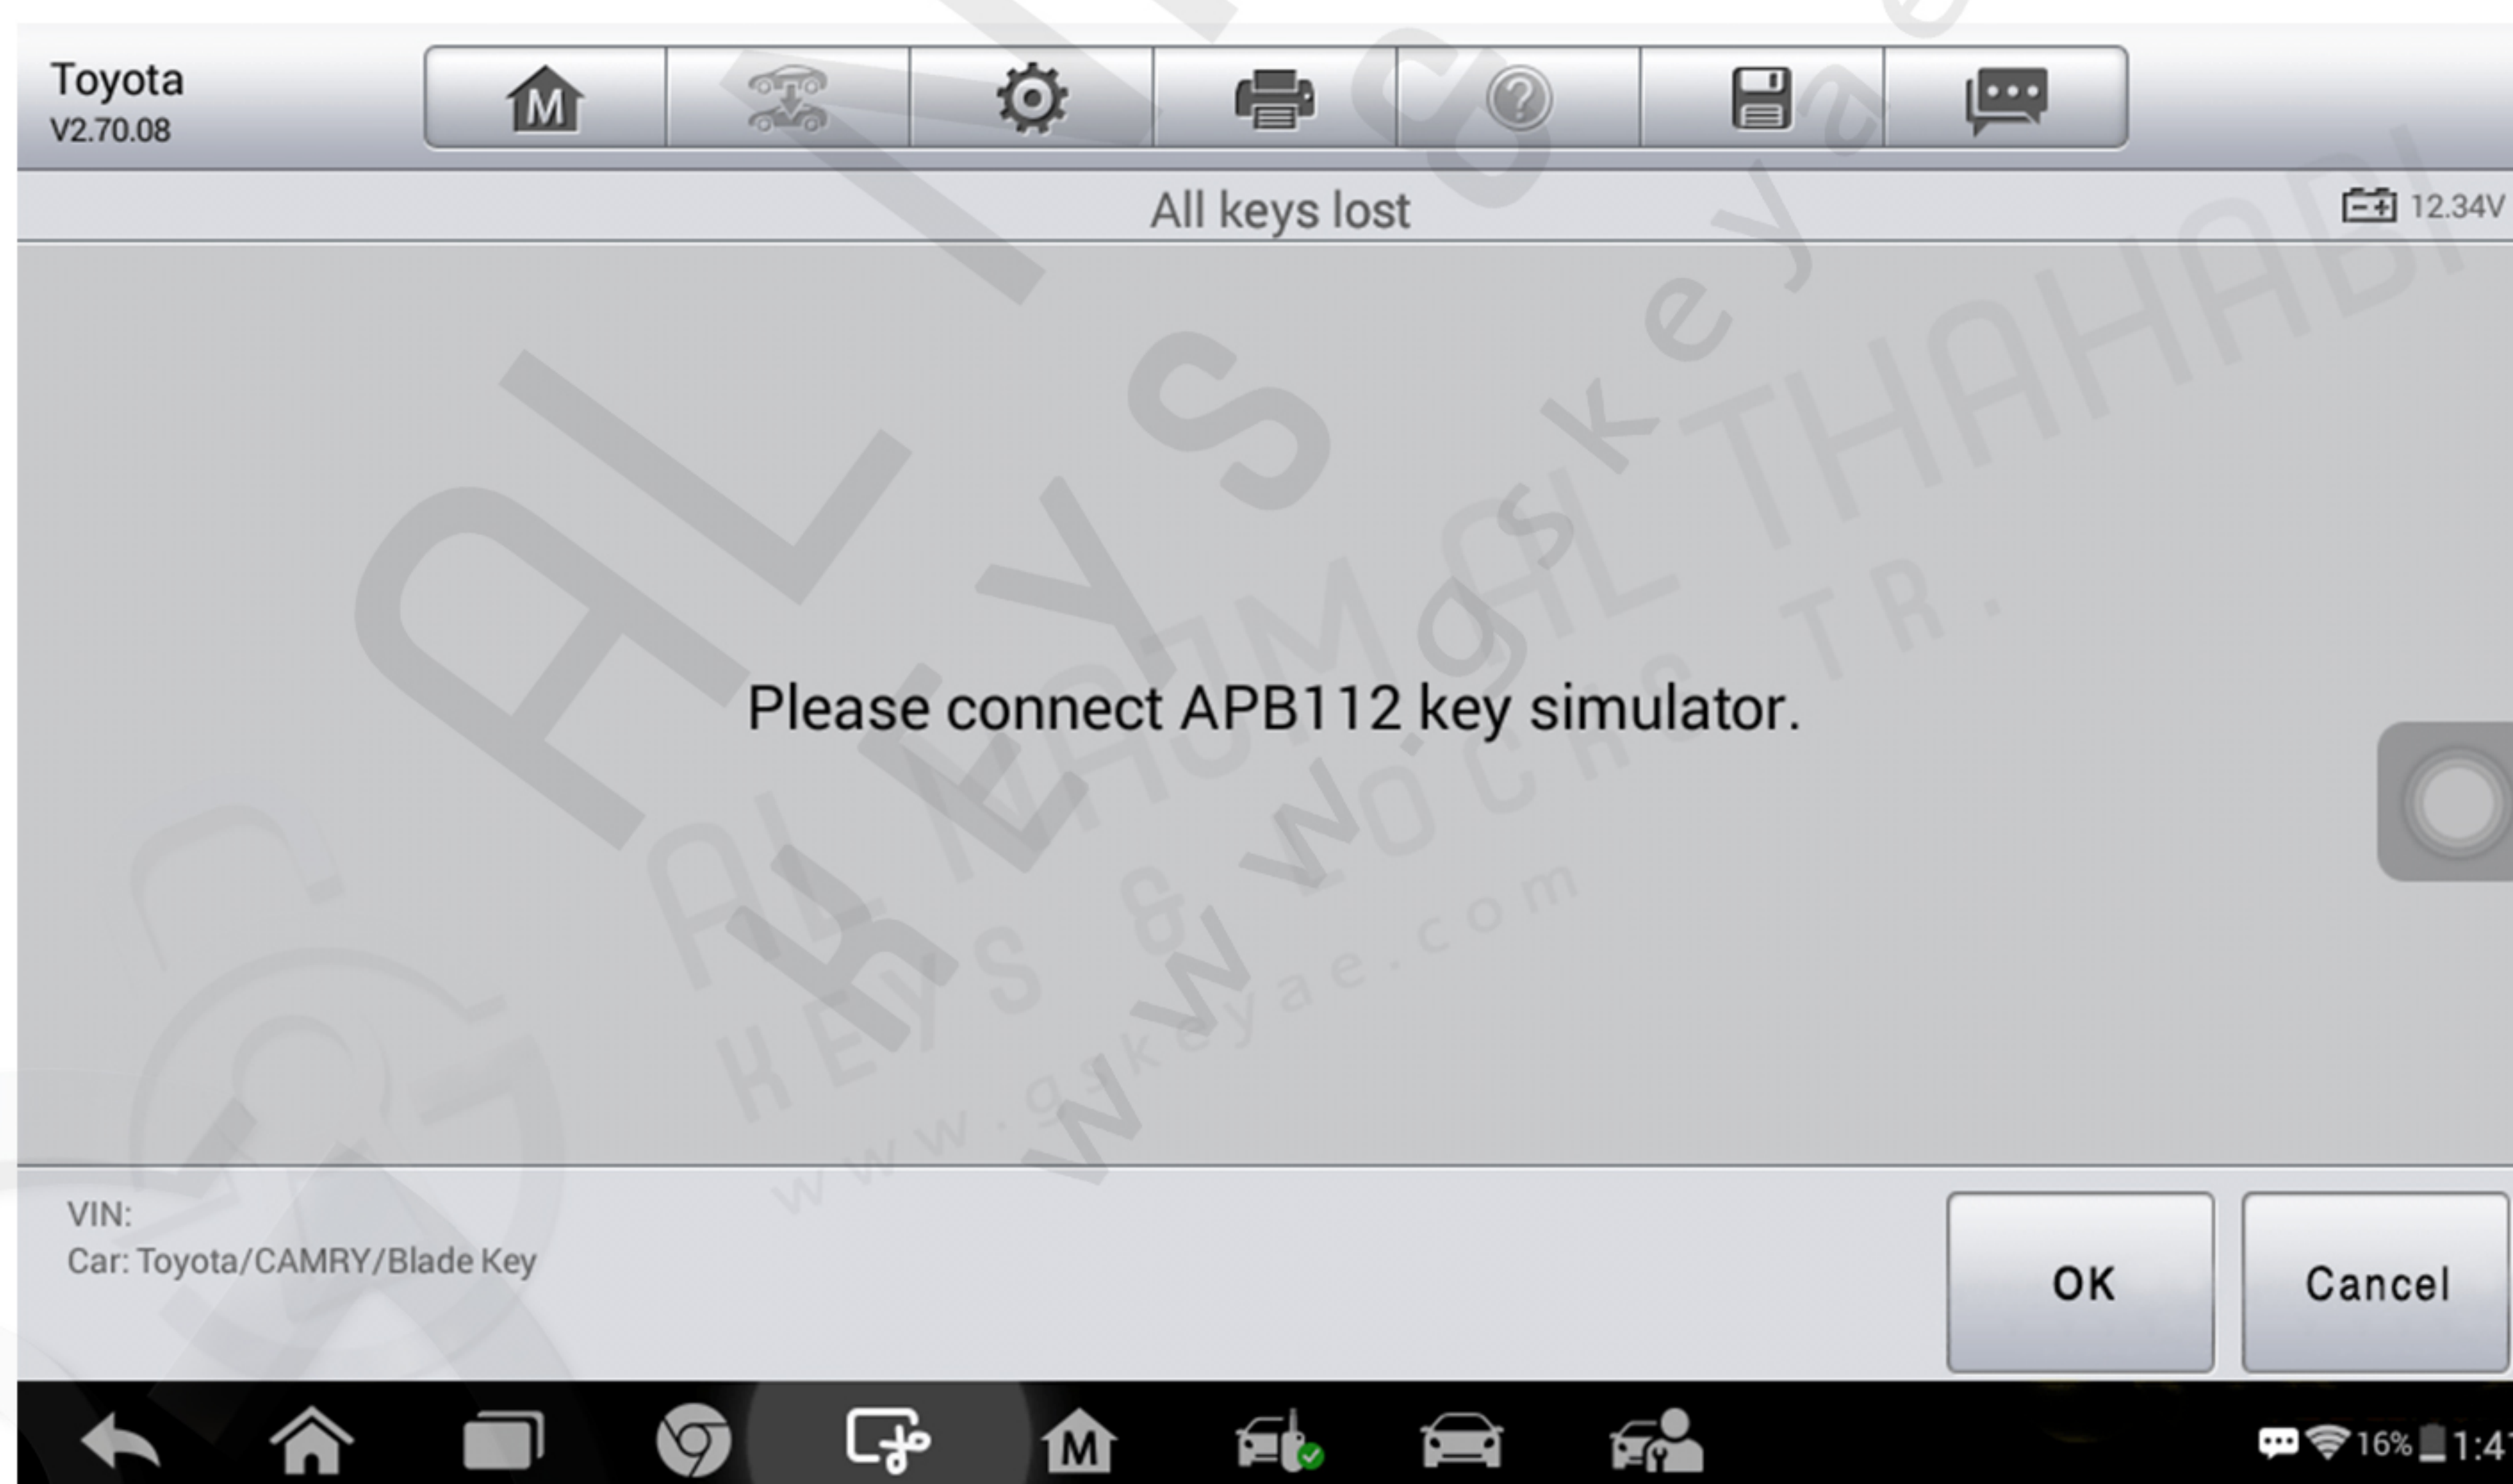


SCAN ME



10 - Connect APB112 to the IMMO tablet using the USB cable. Once connected, the status indicator will light steady blue, indicating it is working properly. Tap [OK] to obtain key information.




11 - APB112 will be automatically updated when doing 8A Key All Keys Lost for the first time.

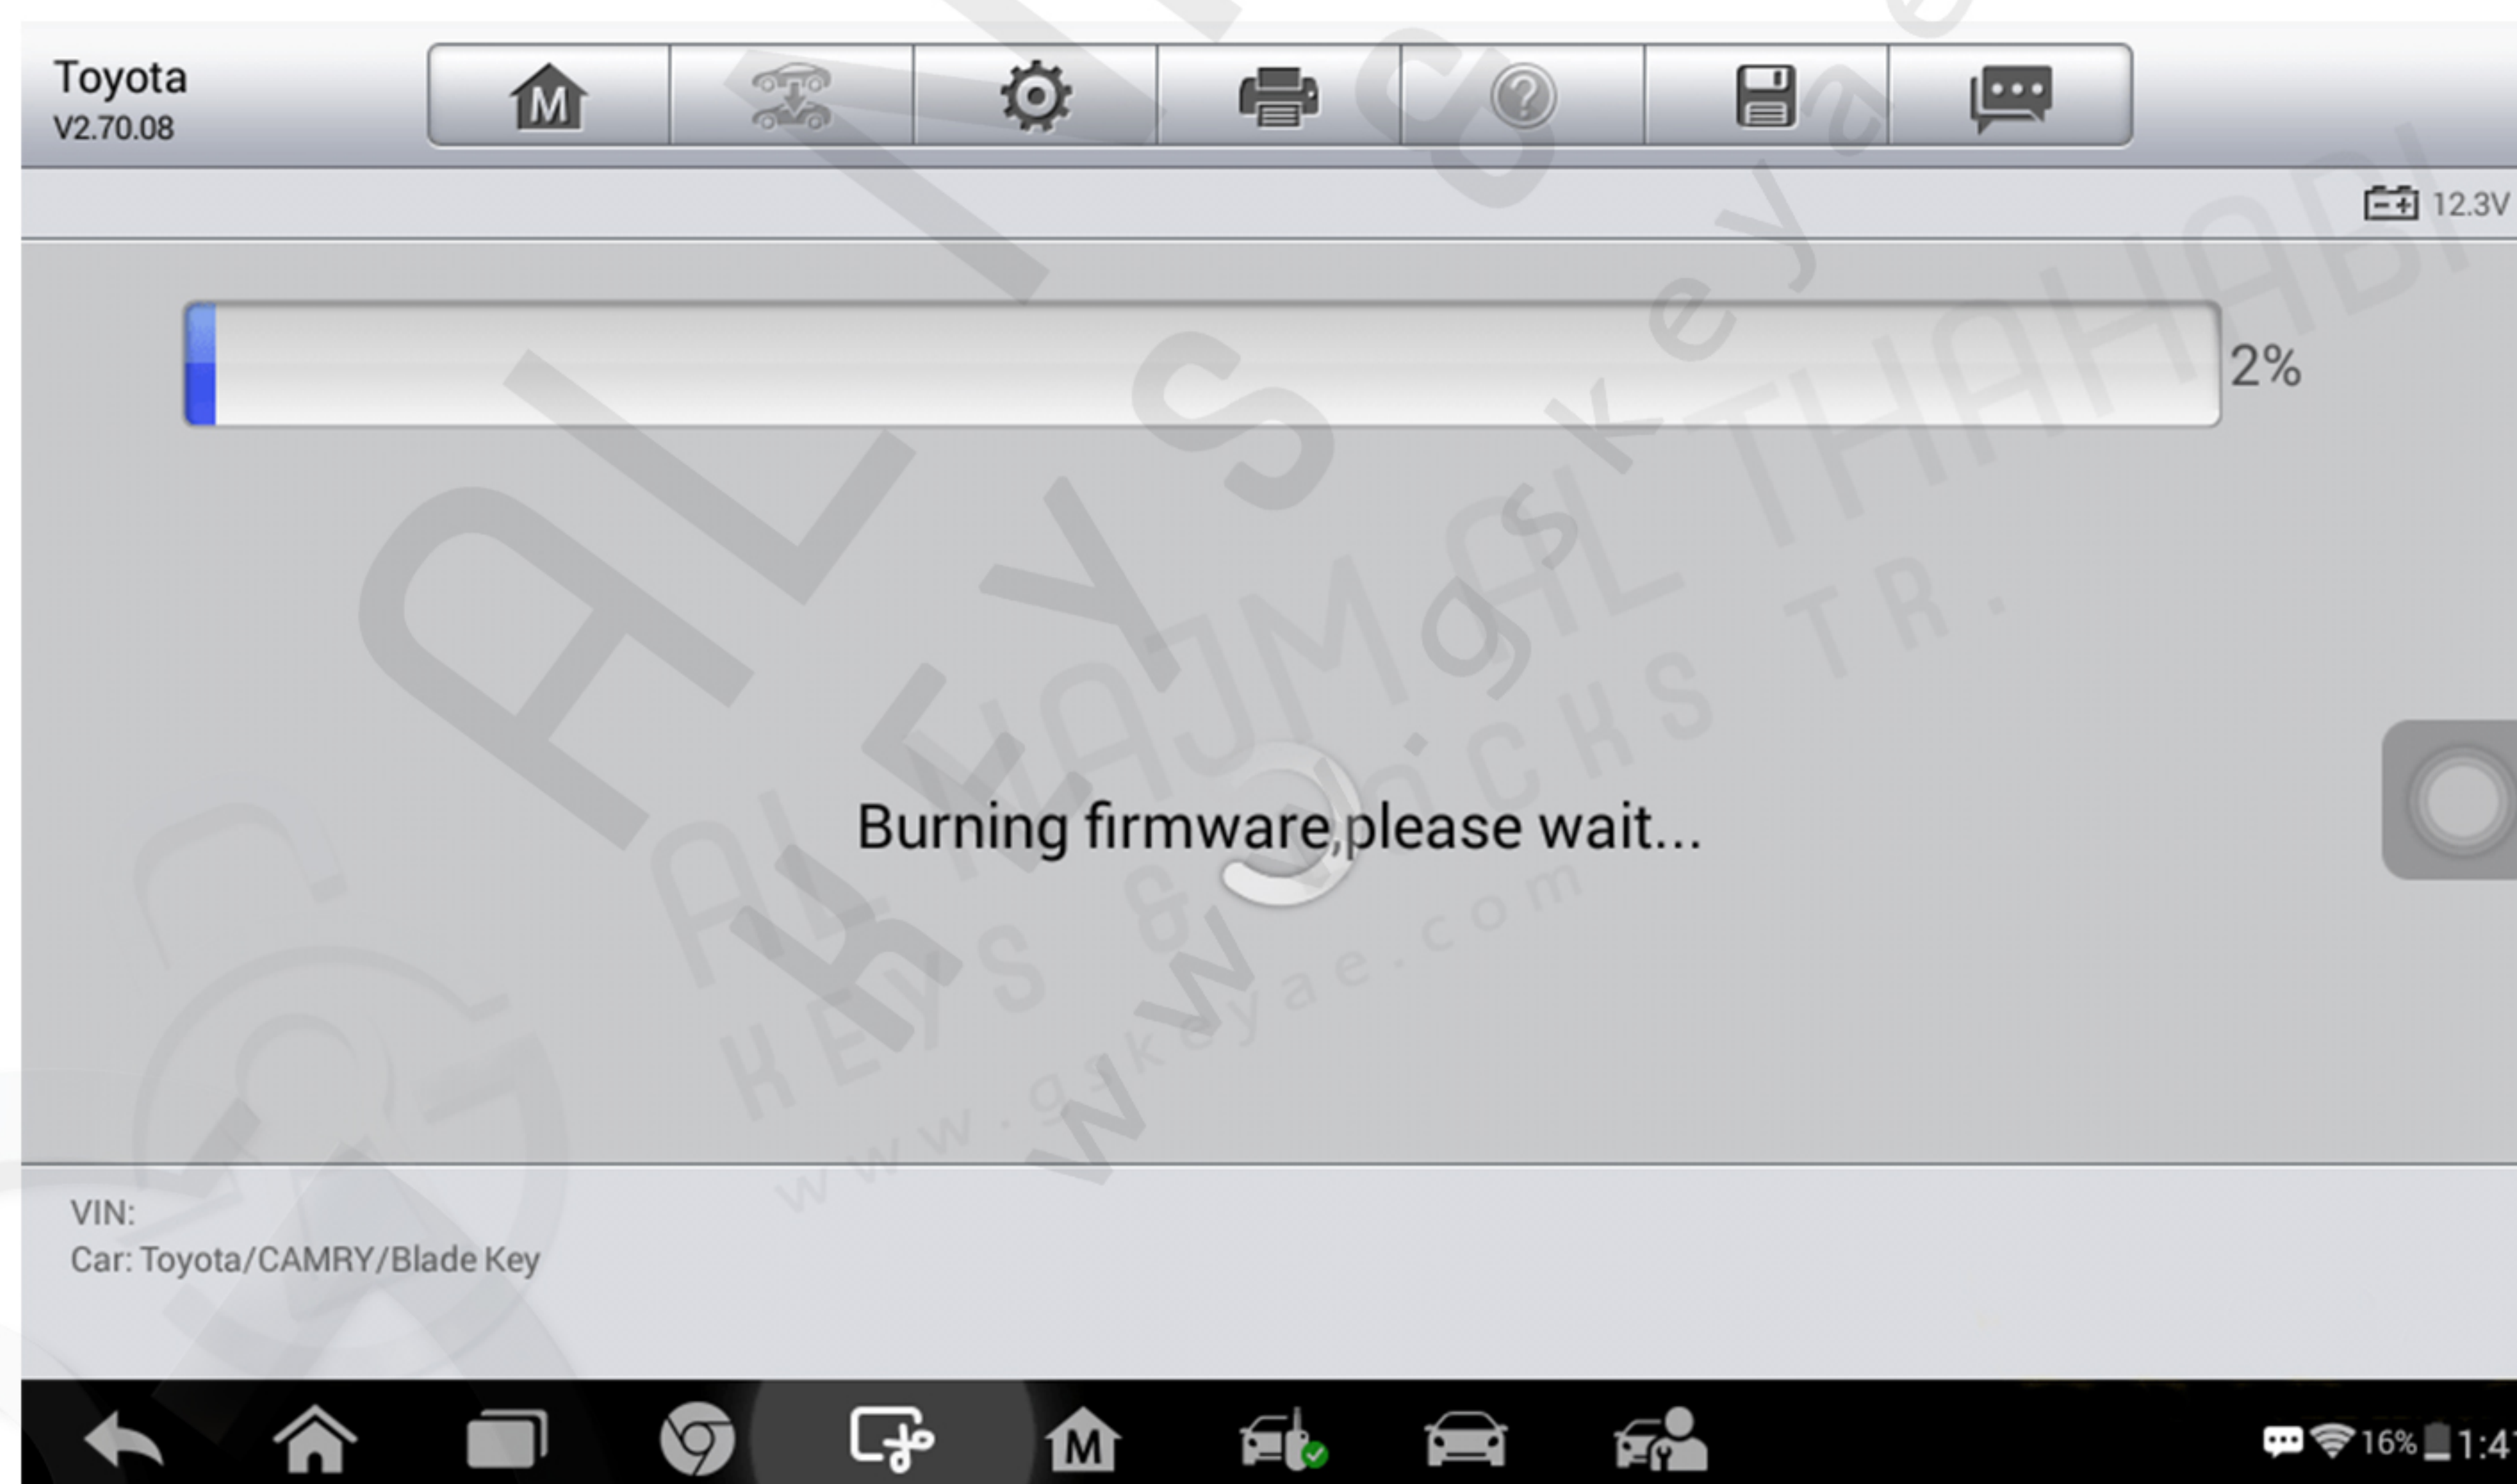


SCAN ME



12 - The simulator key is successfully generated.

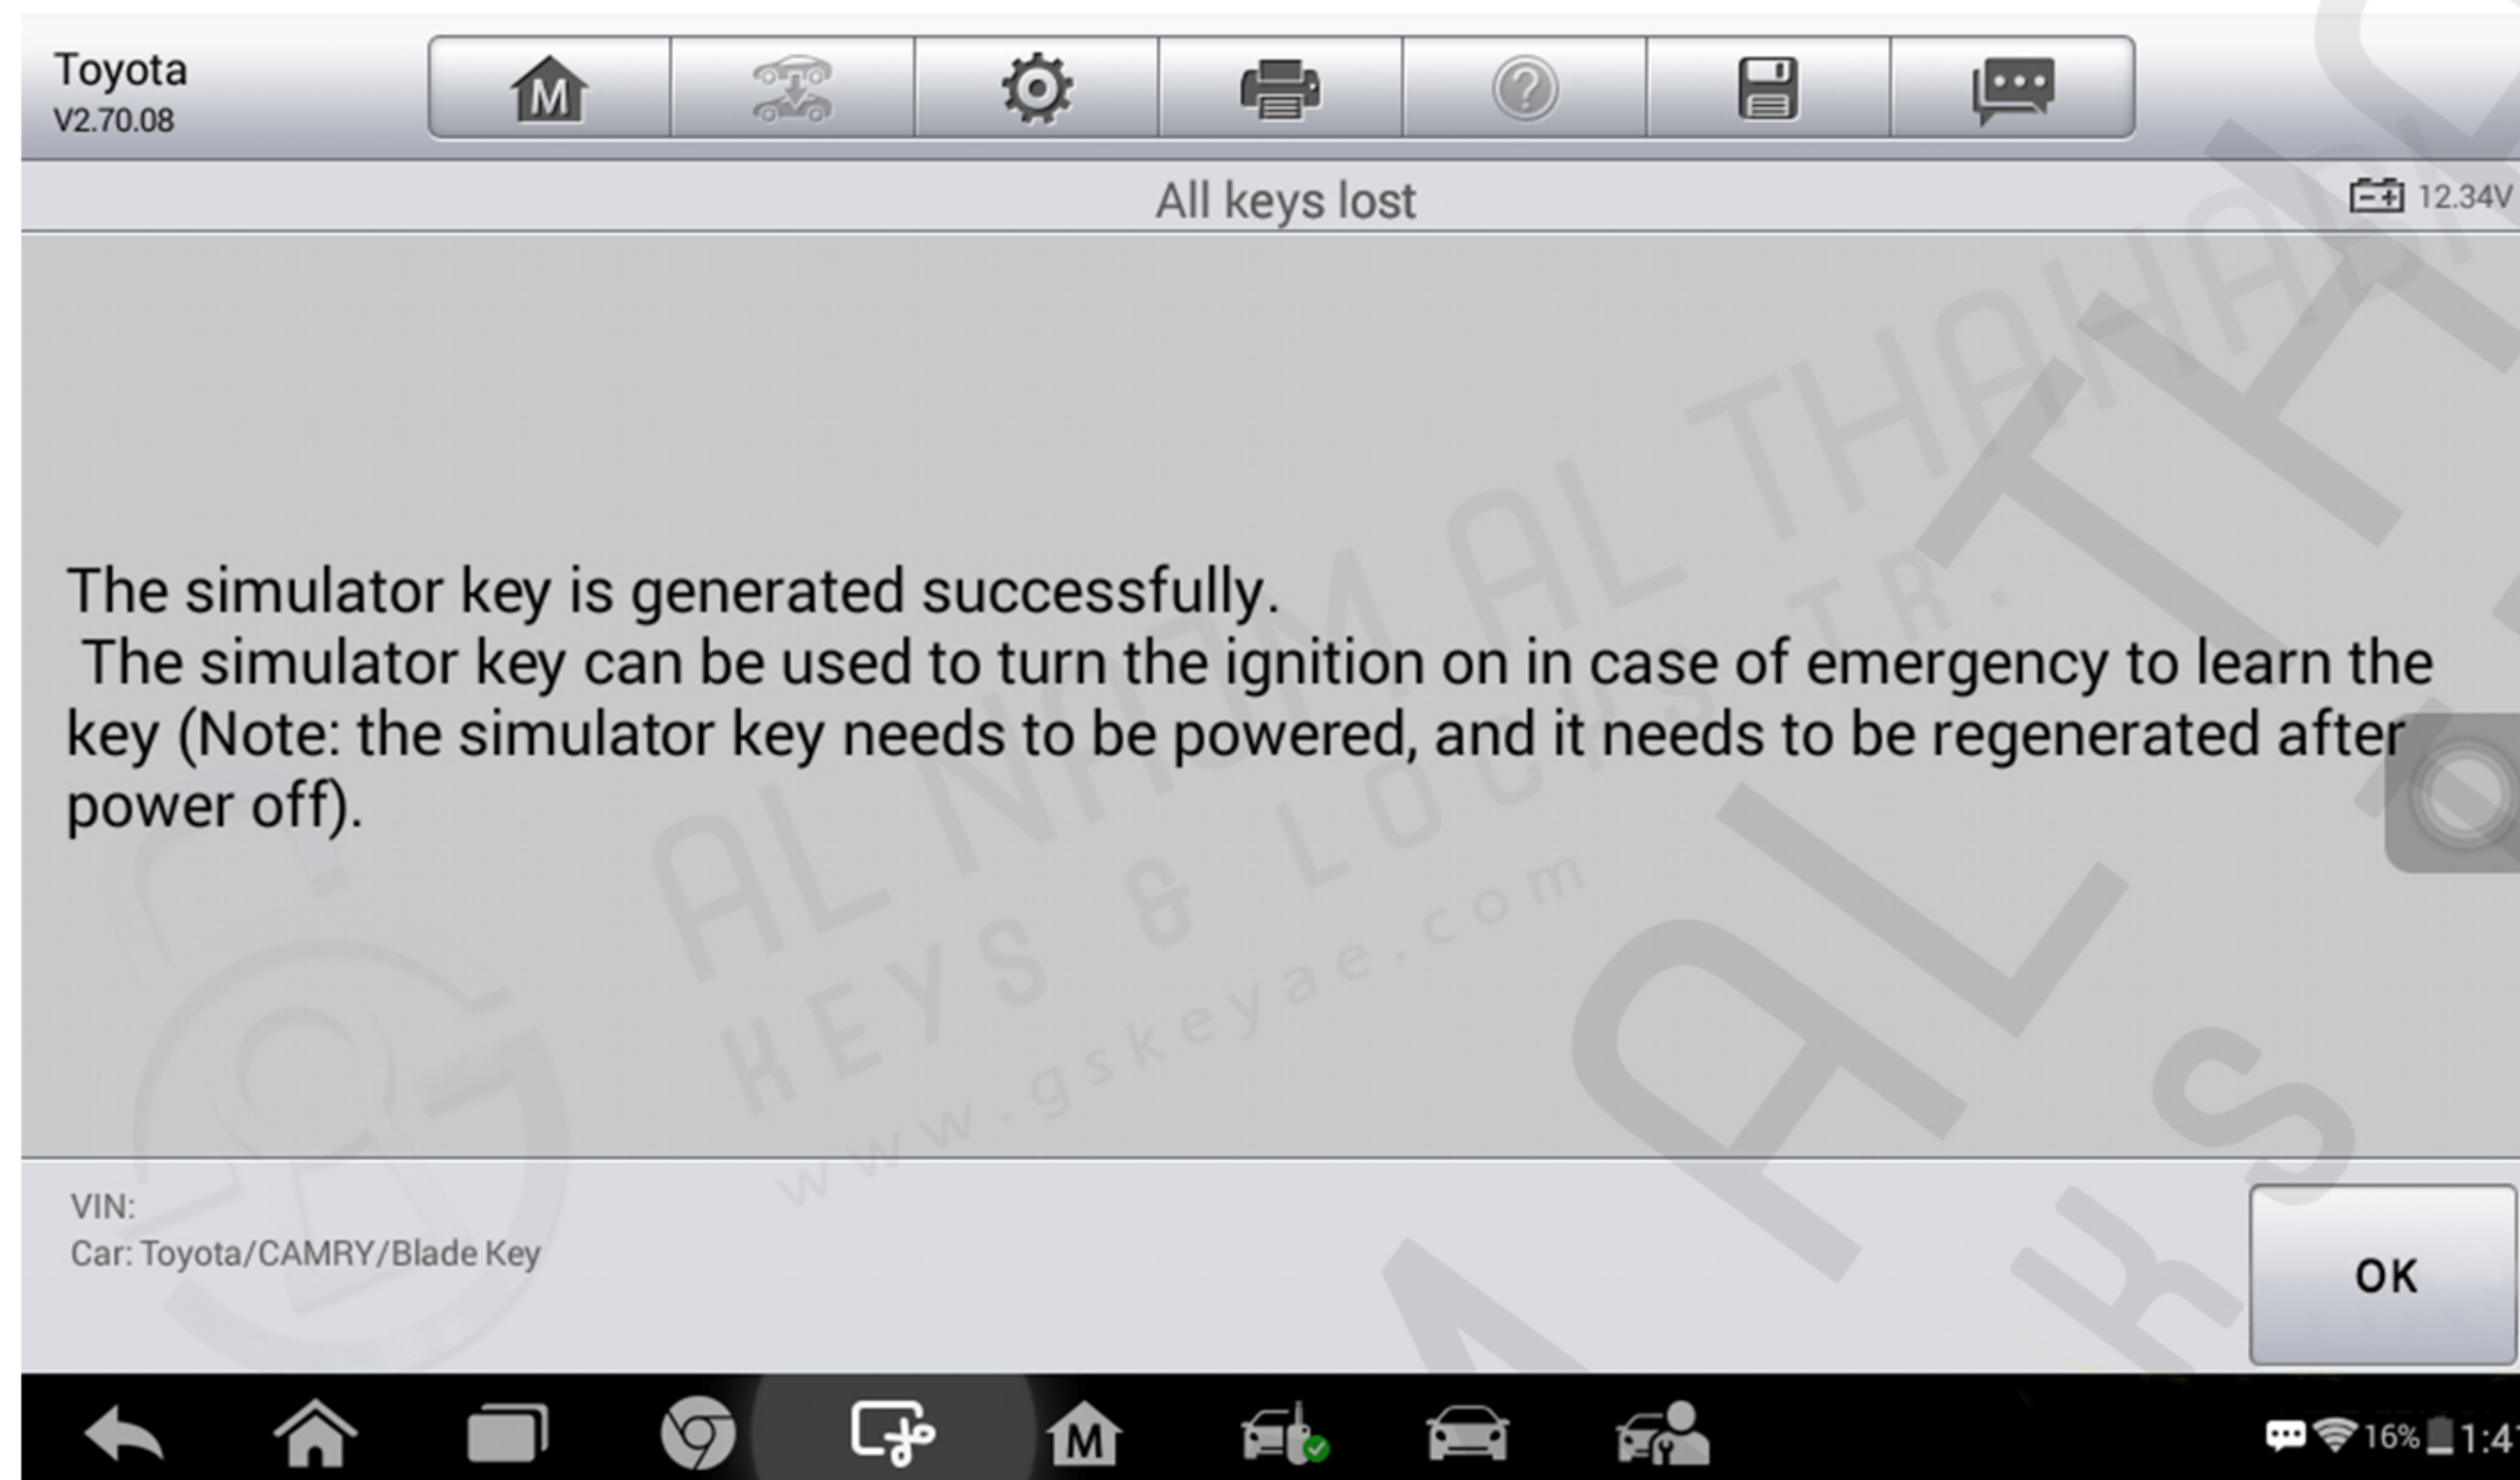


13 - Turn OFF the ignition, pull out the key blade. Pull out the B+ Fuse, IGN Fuse and KSW and restore the vehicle circuit.

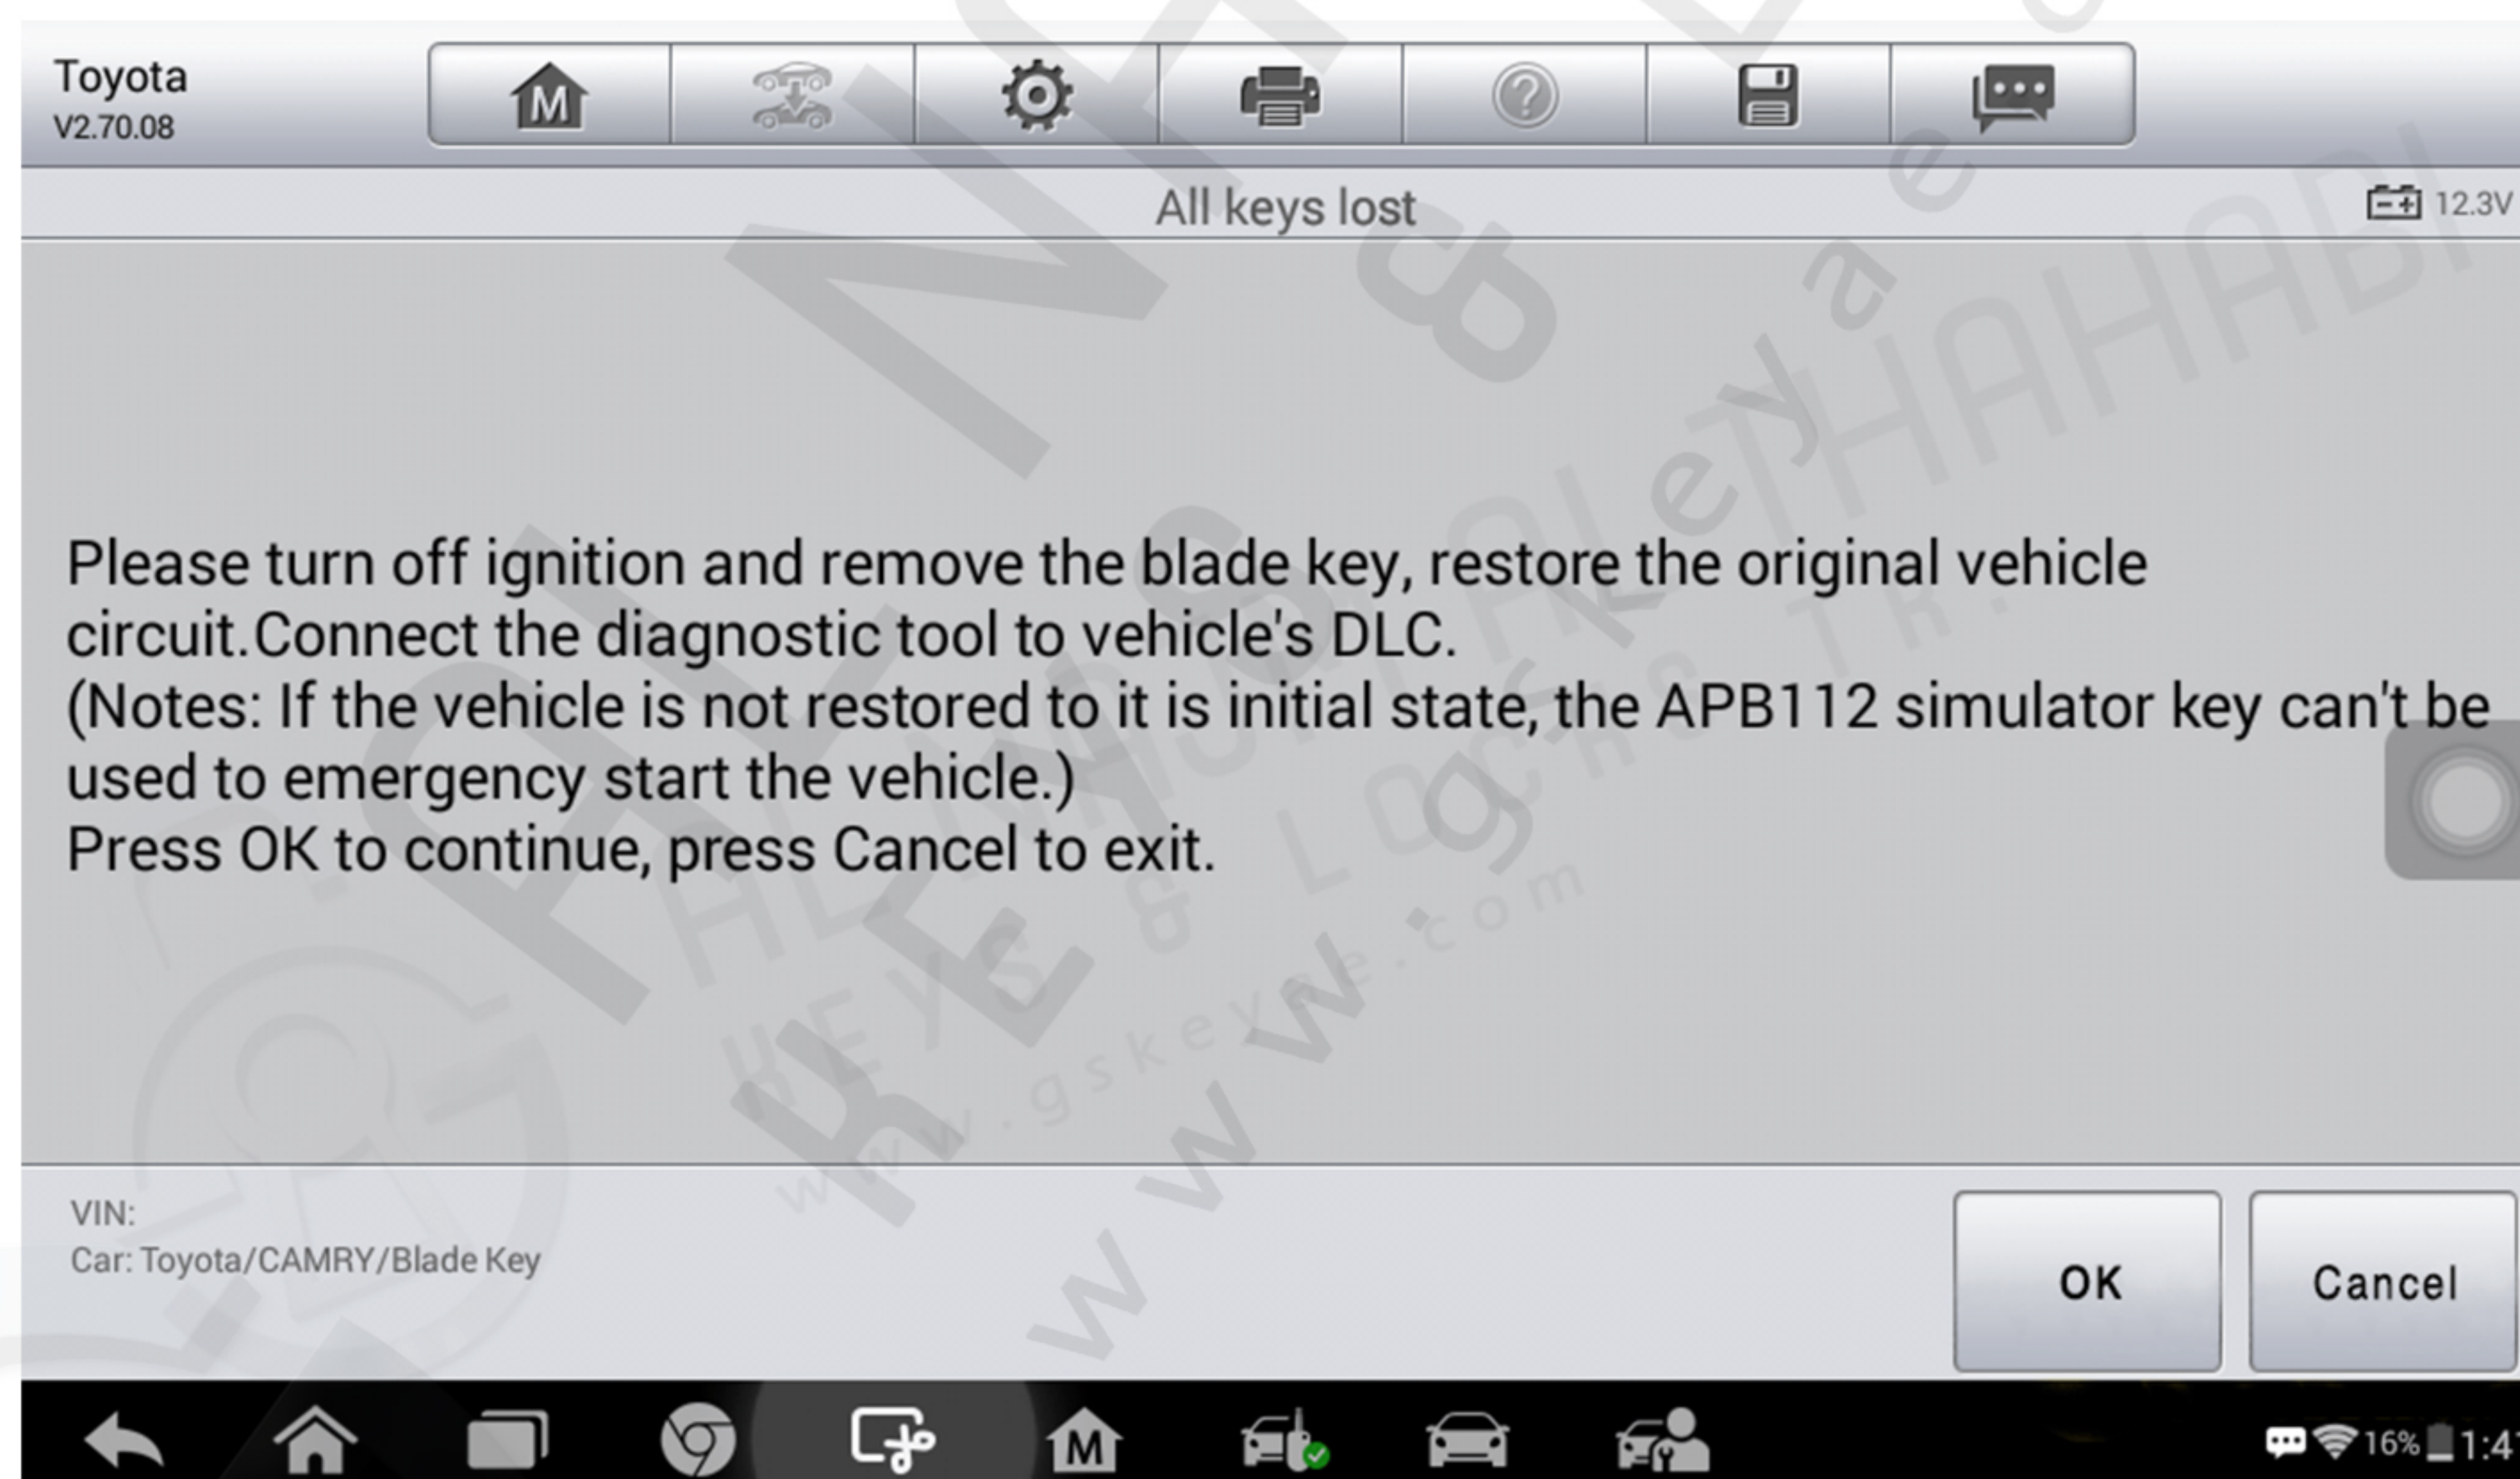


SCAN ME



14 - Ensure the IMMO tablet is connected to the vehicle's DLC. Put APB112 close to the ignition coil, insert the blade key (without chip) and turn ON the ignition.

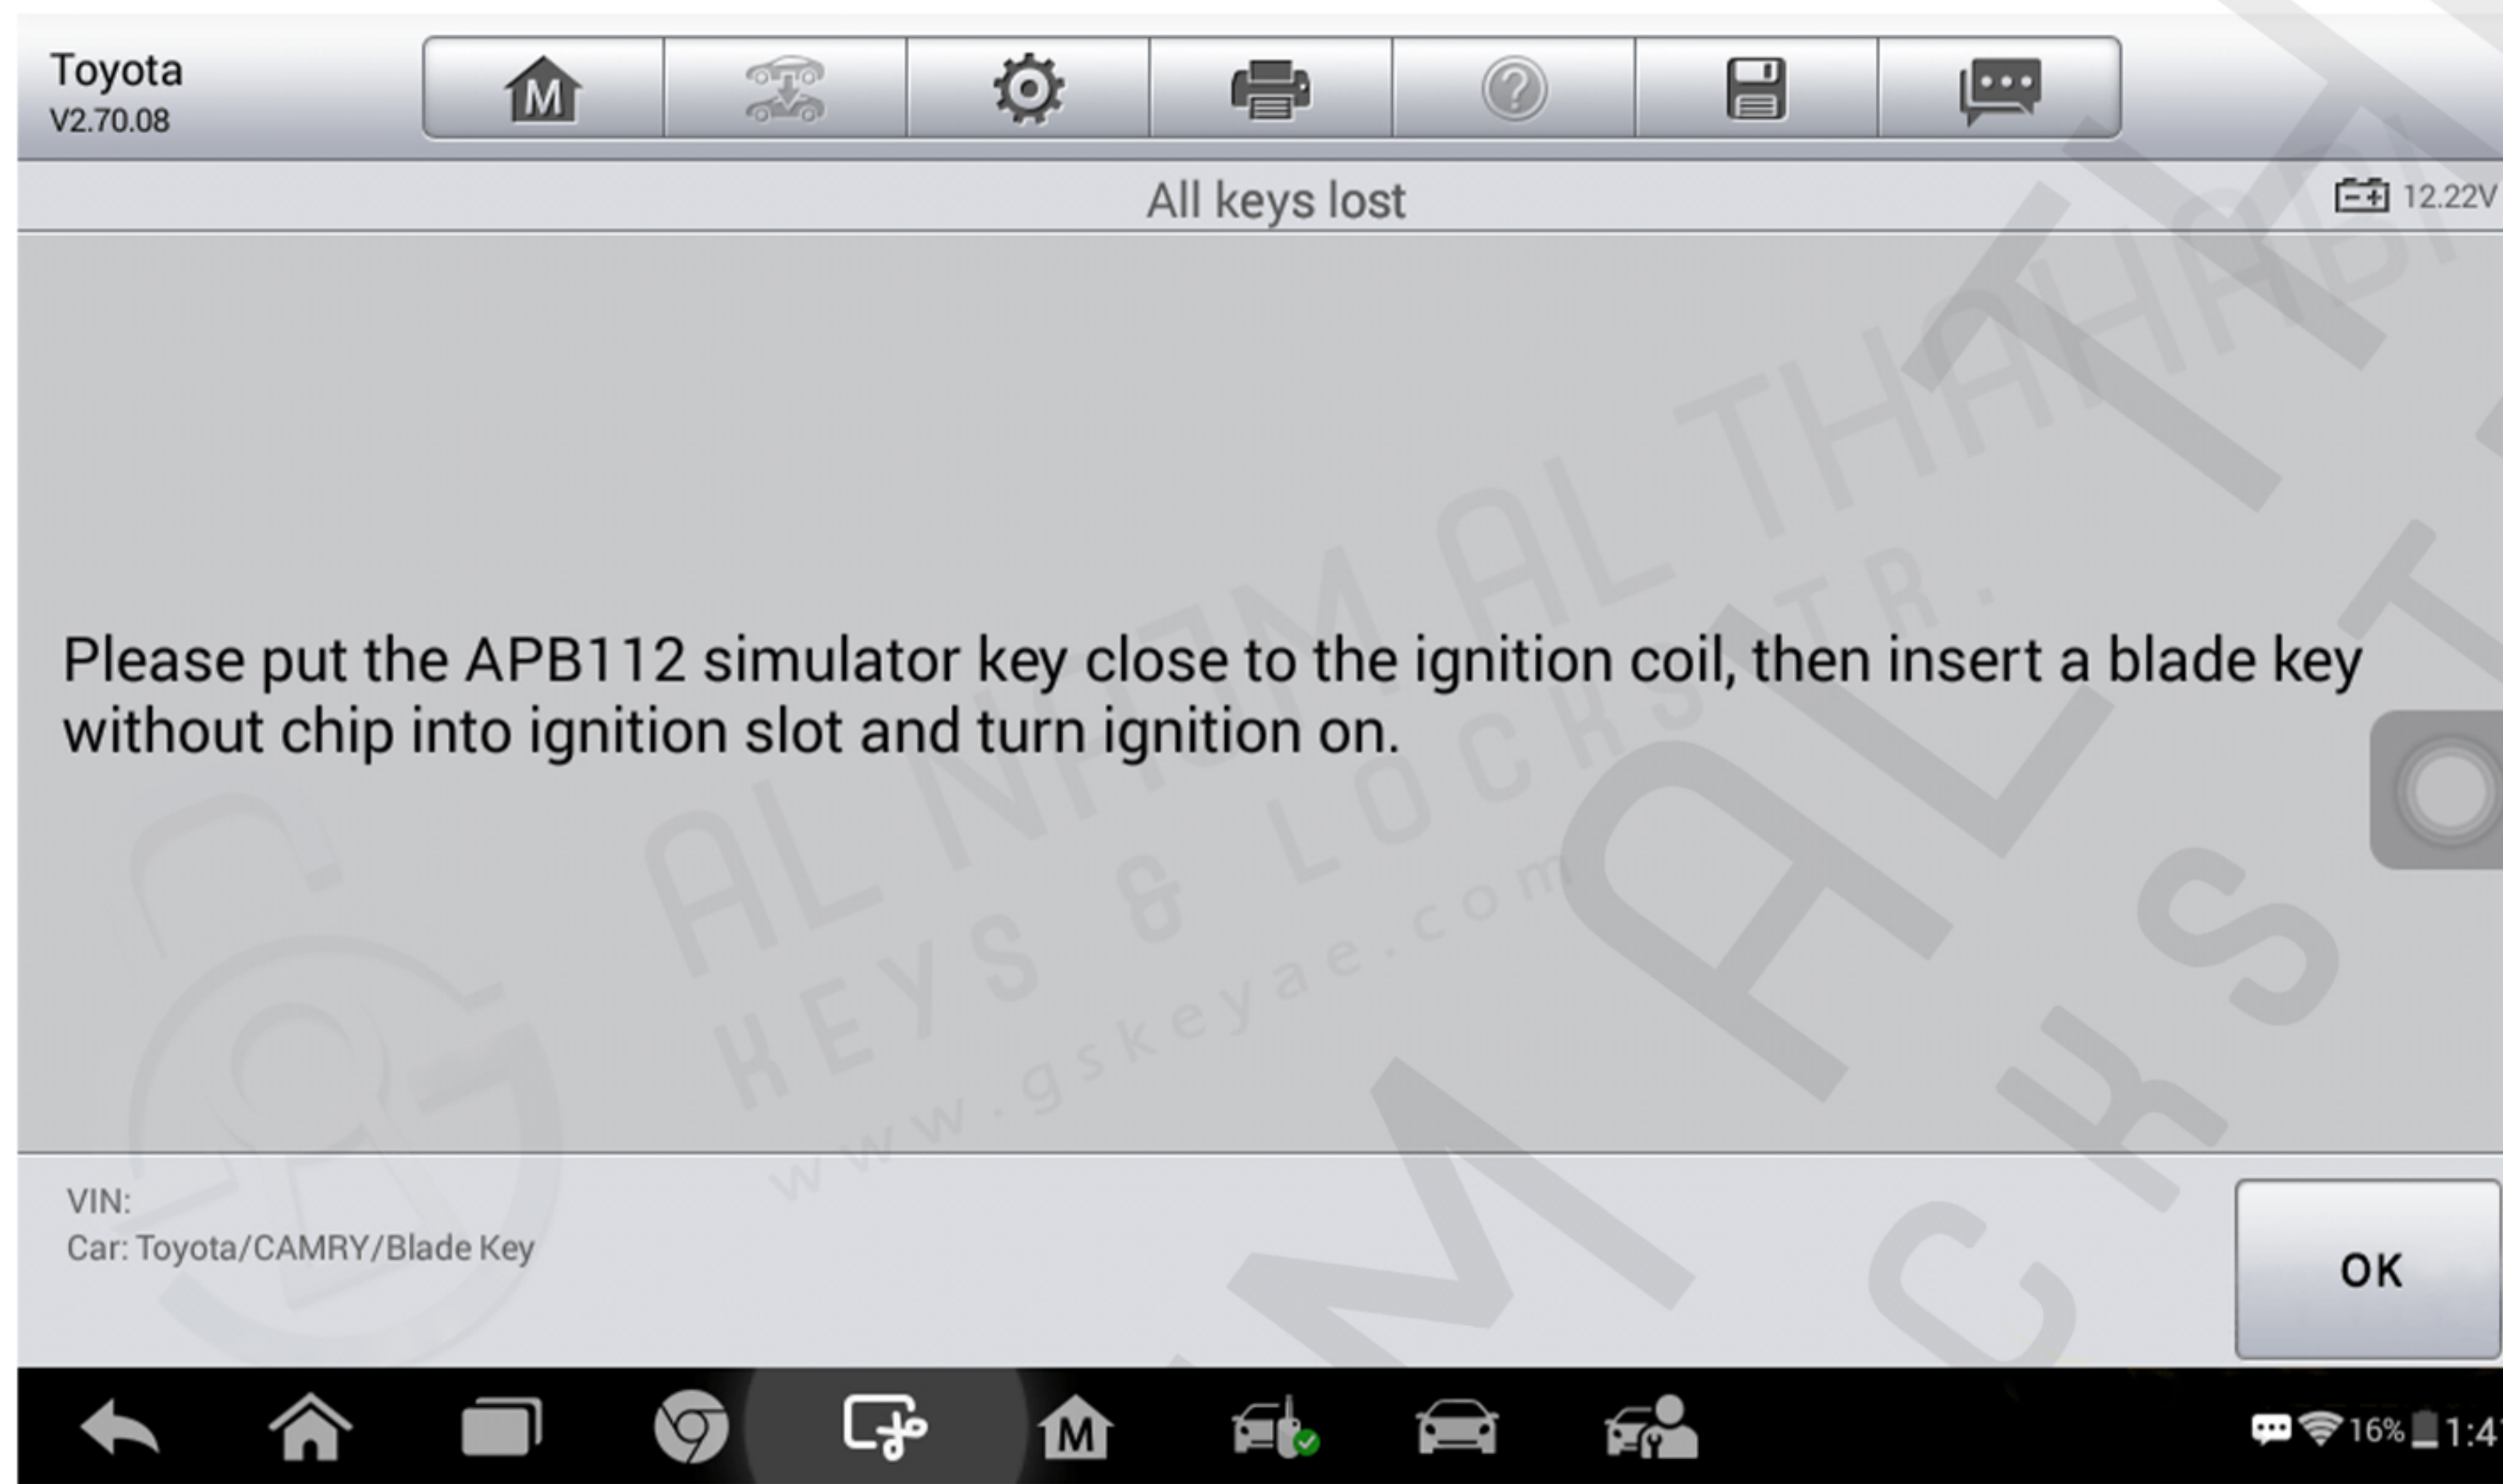


15 - Tap [OK] to establish vehicle communication. Turn OFF the ignition, remove APB112 and pull out the key blade.

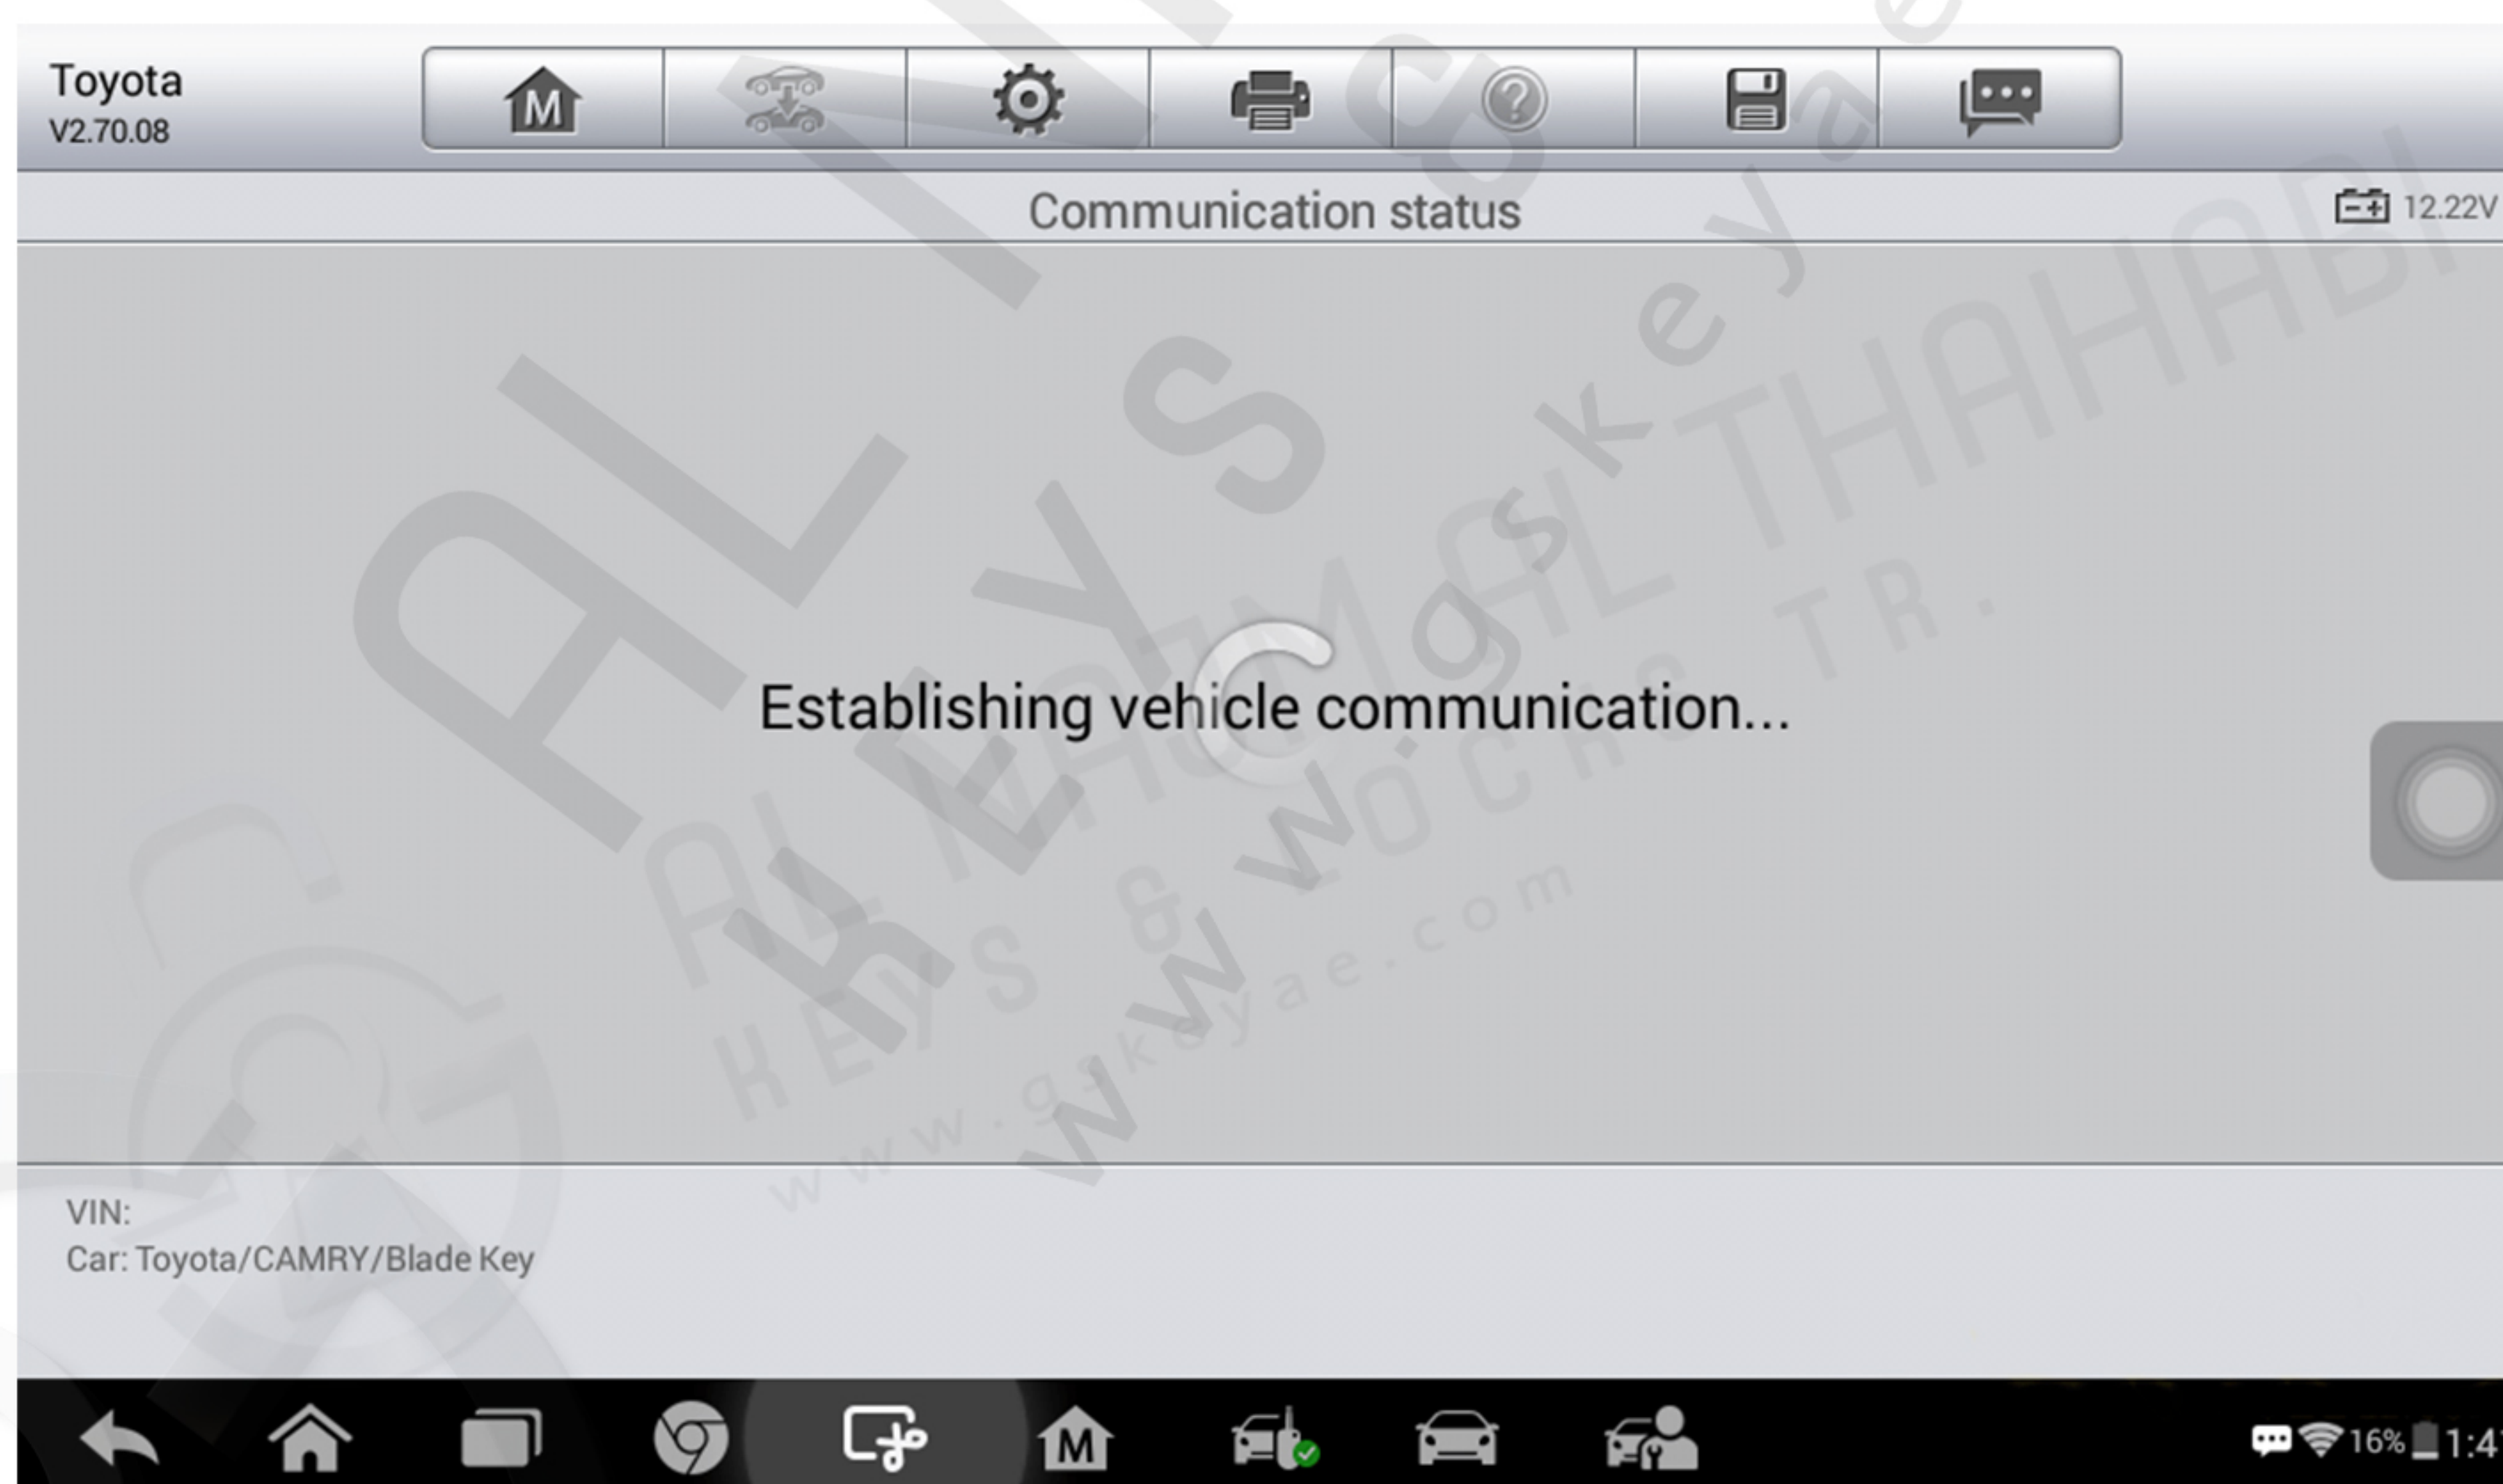


SCAN ME



16 - Insert a key (with chip) and ensure the ignition is OFF.

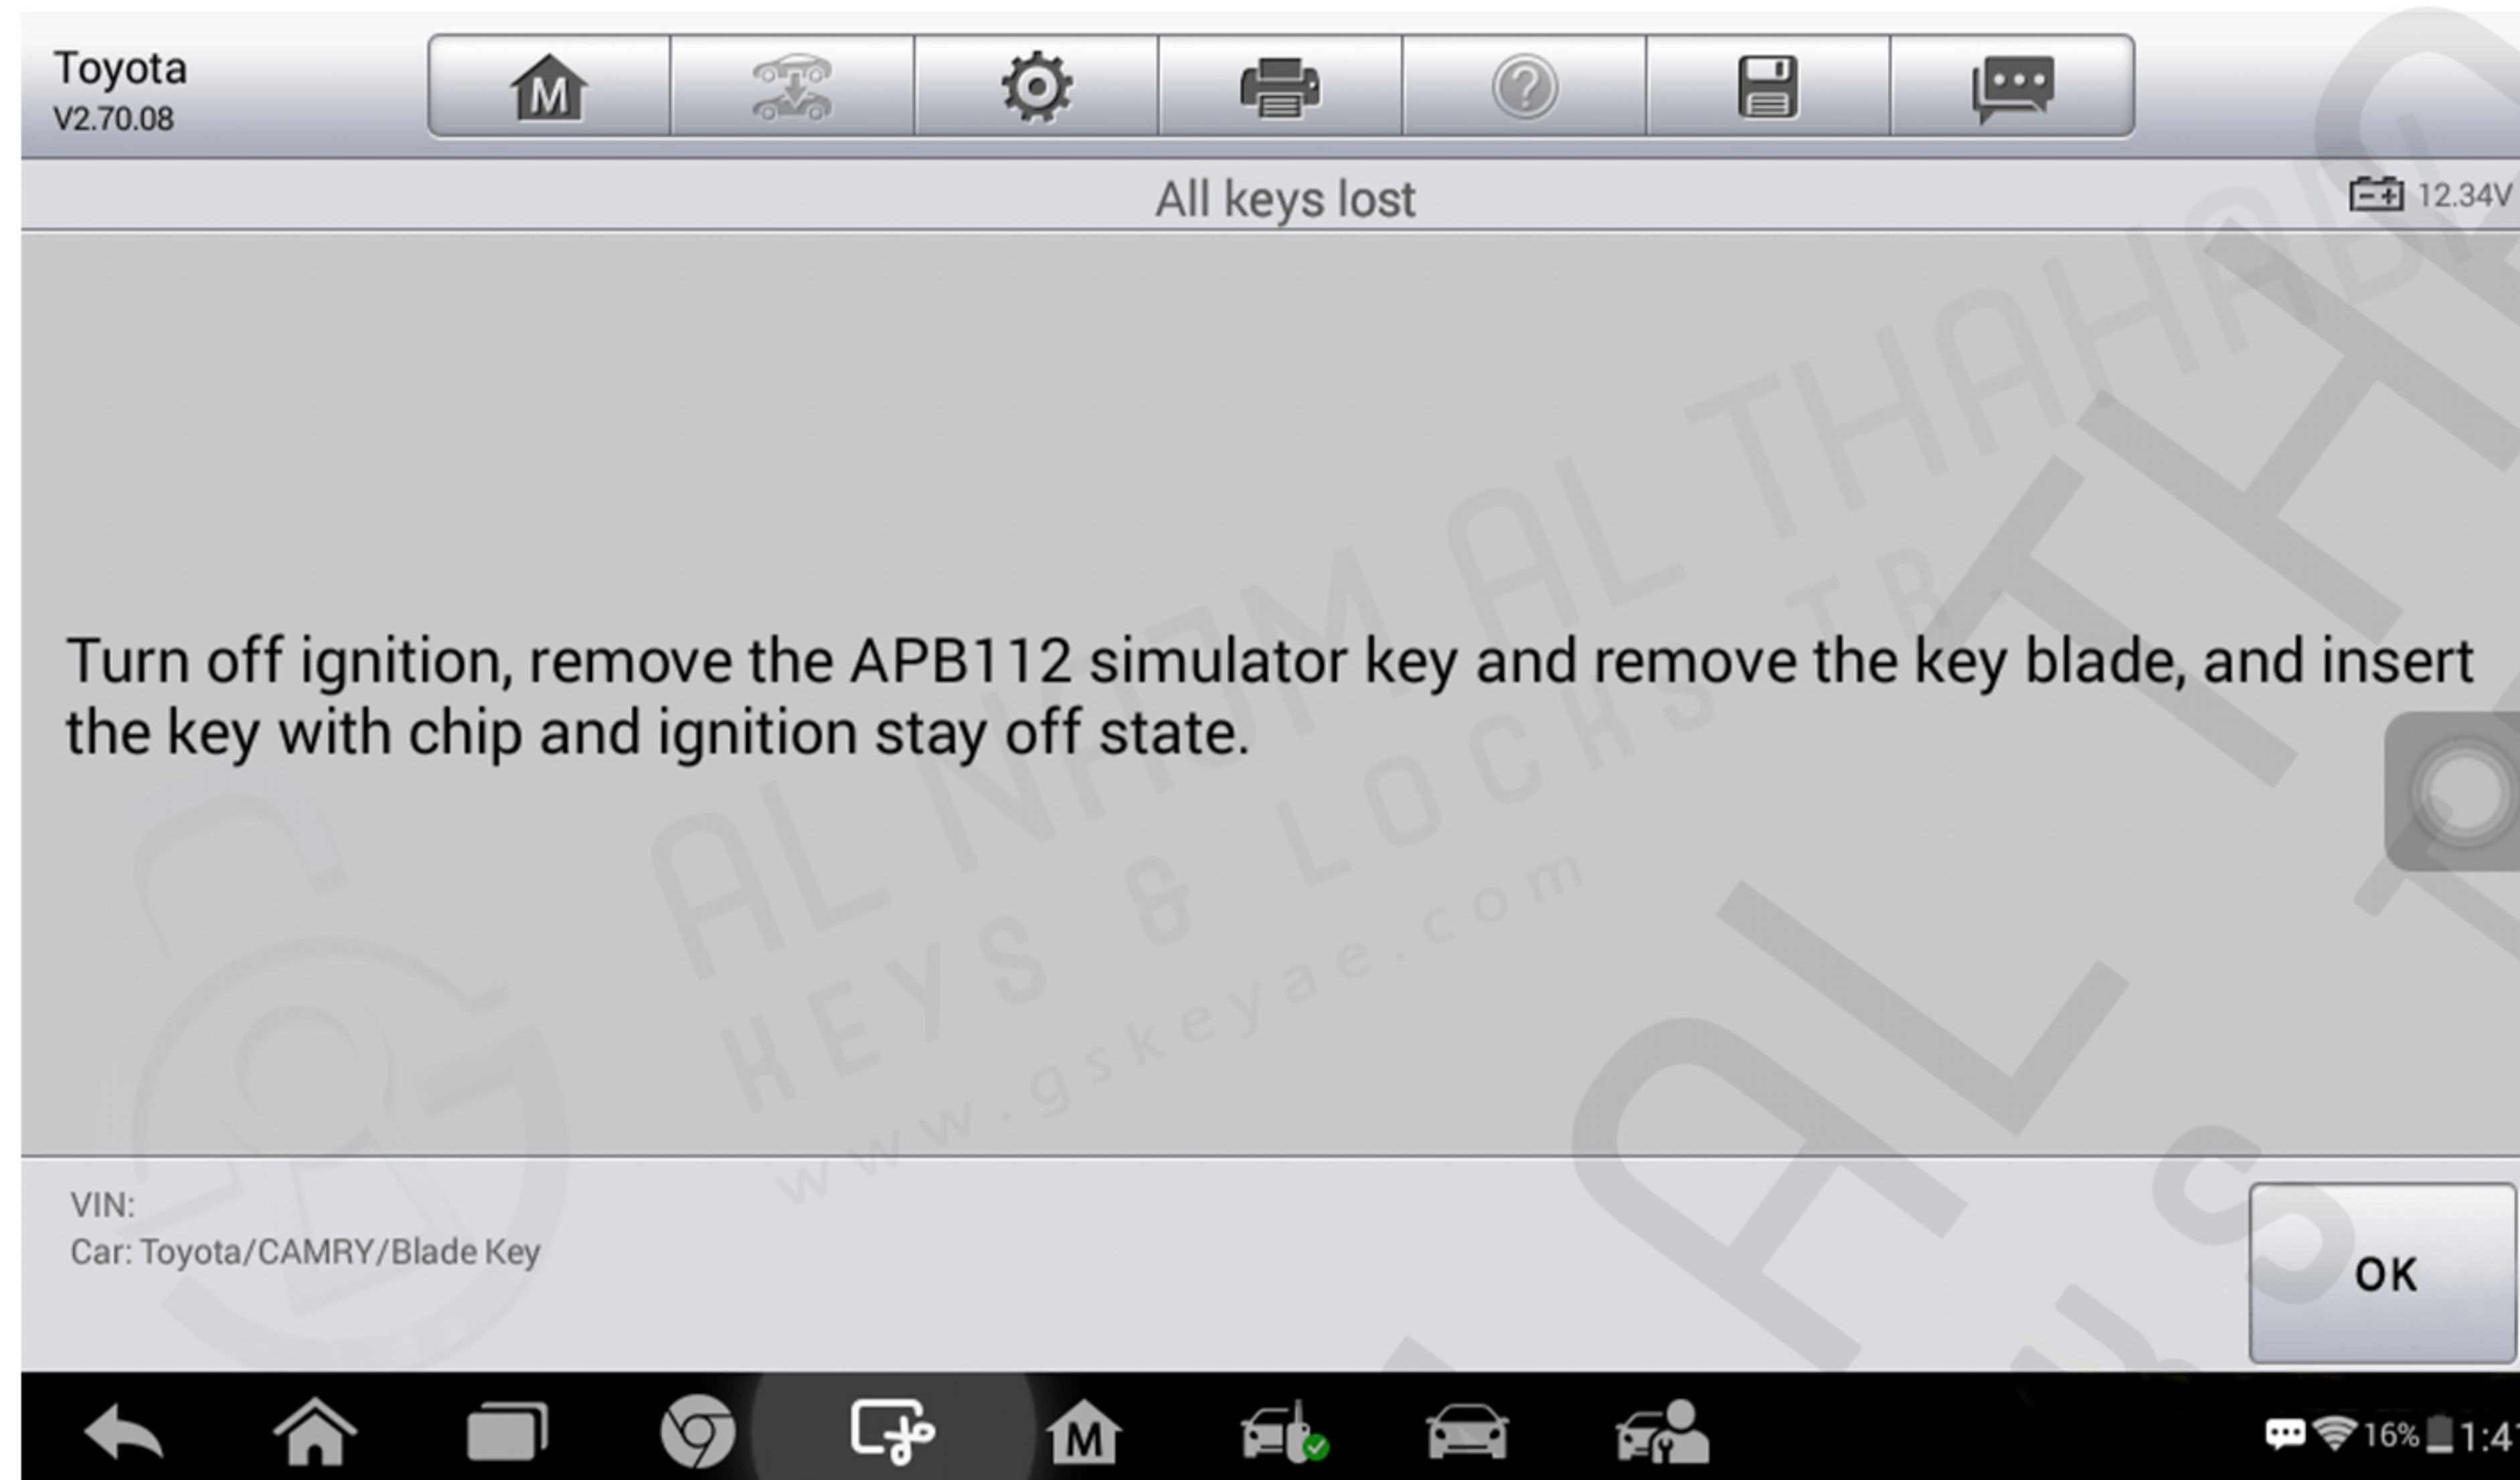

17 - Wait for 5 to 180 seconds. The key learning is completed when the immobilizer warning light is off.

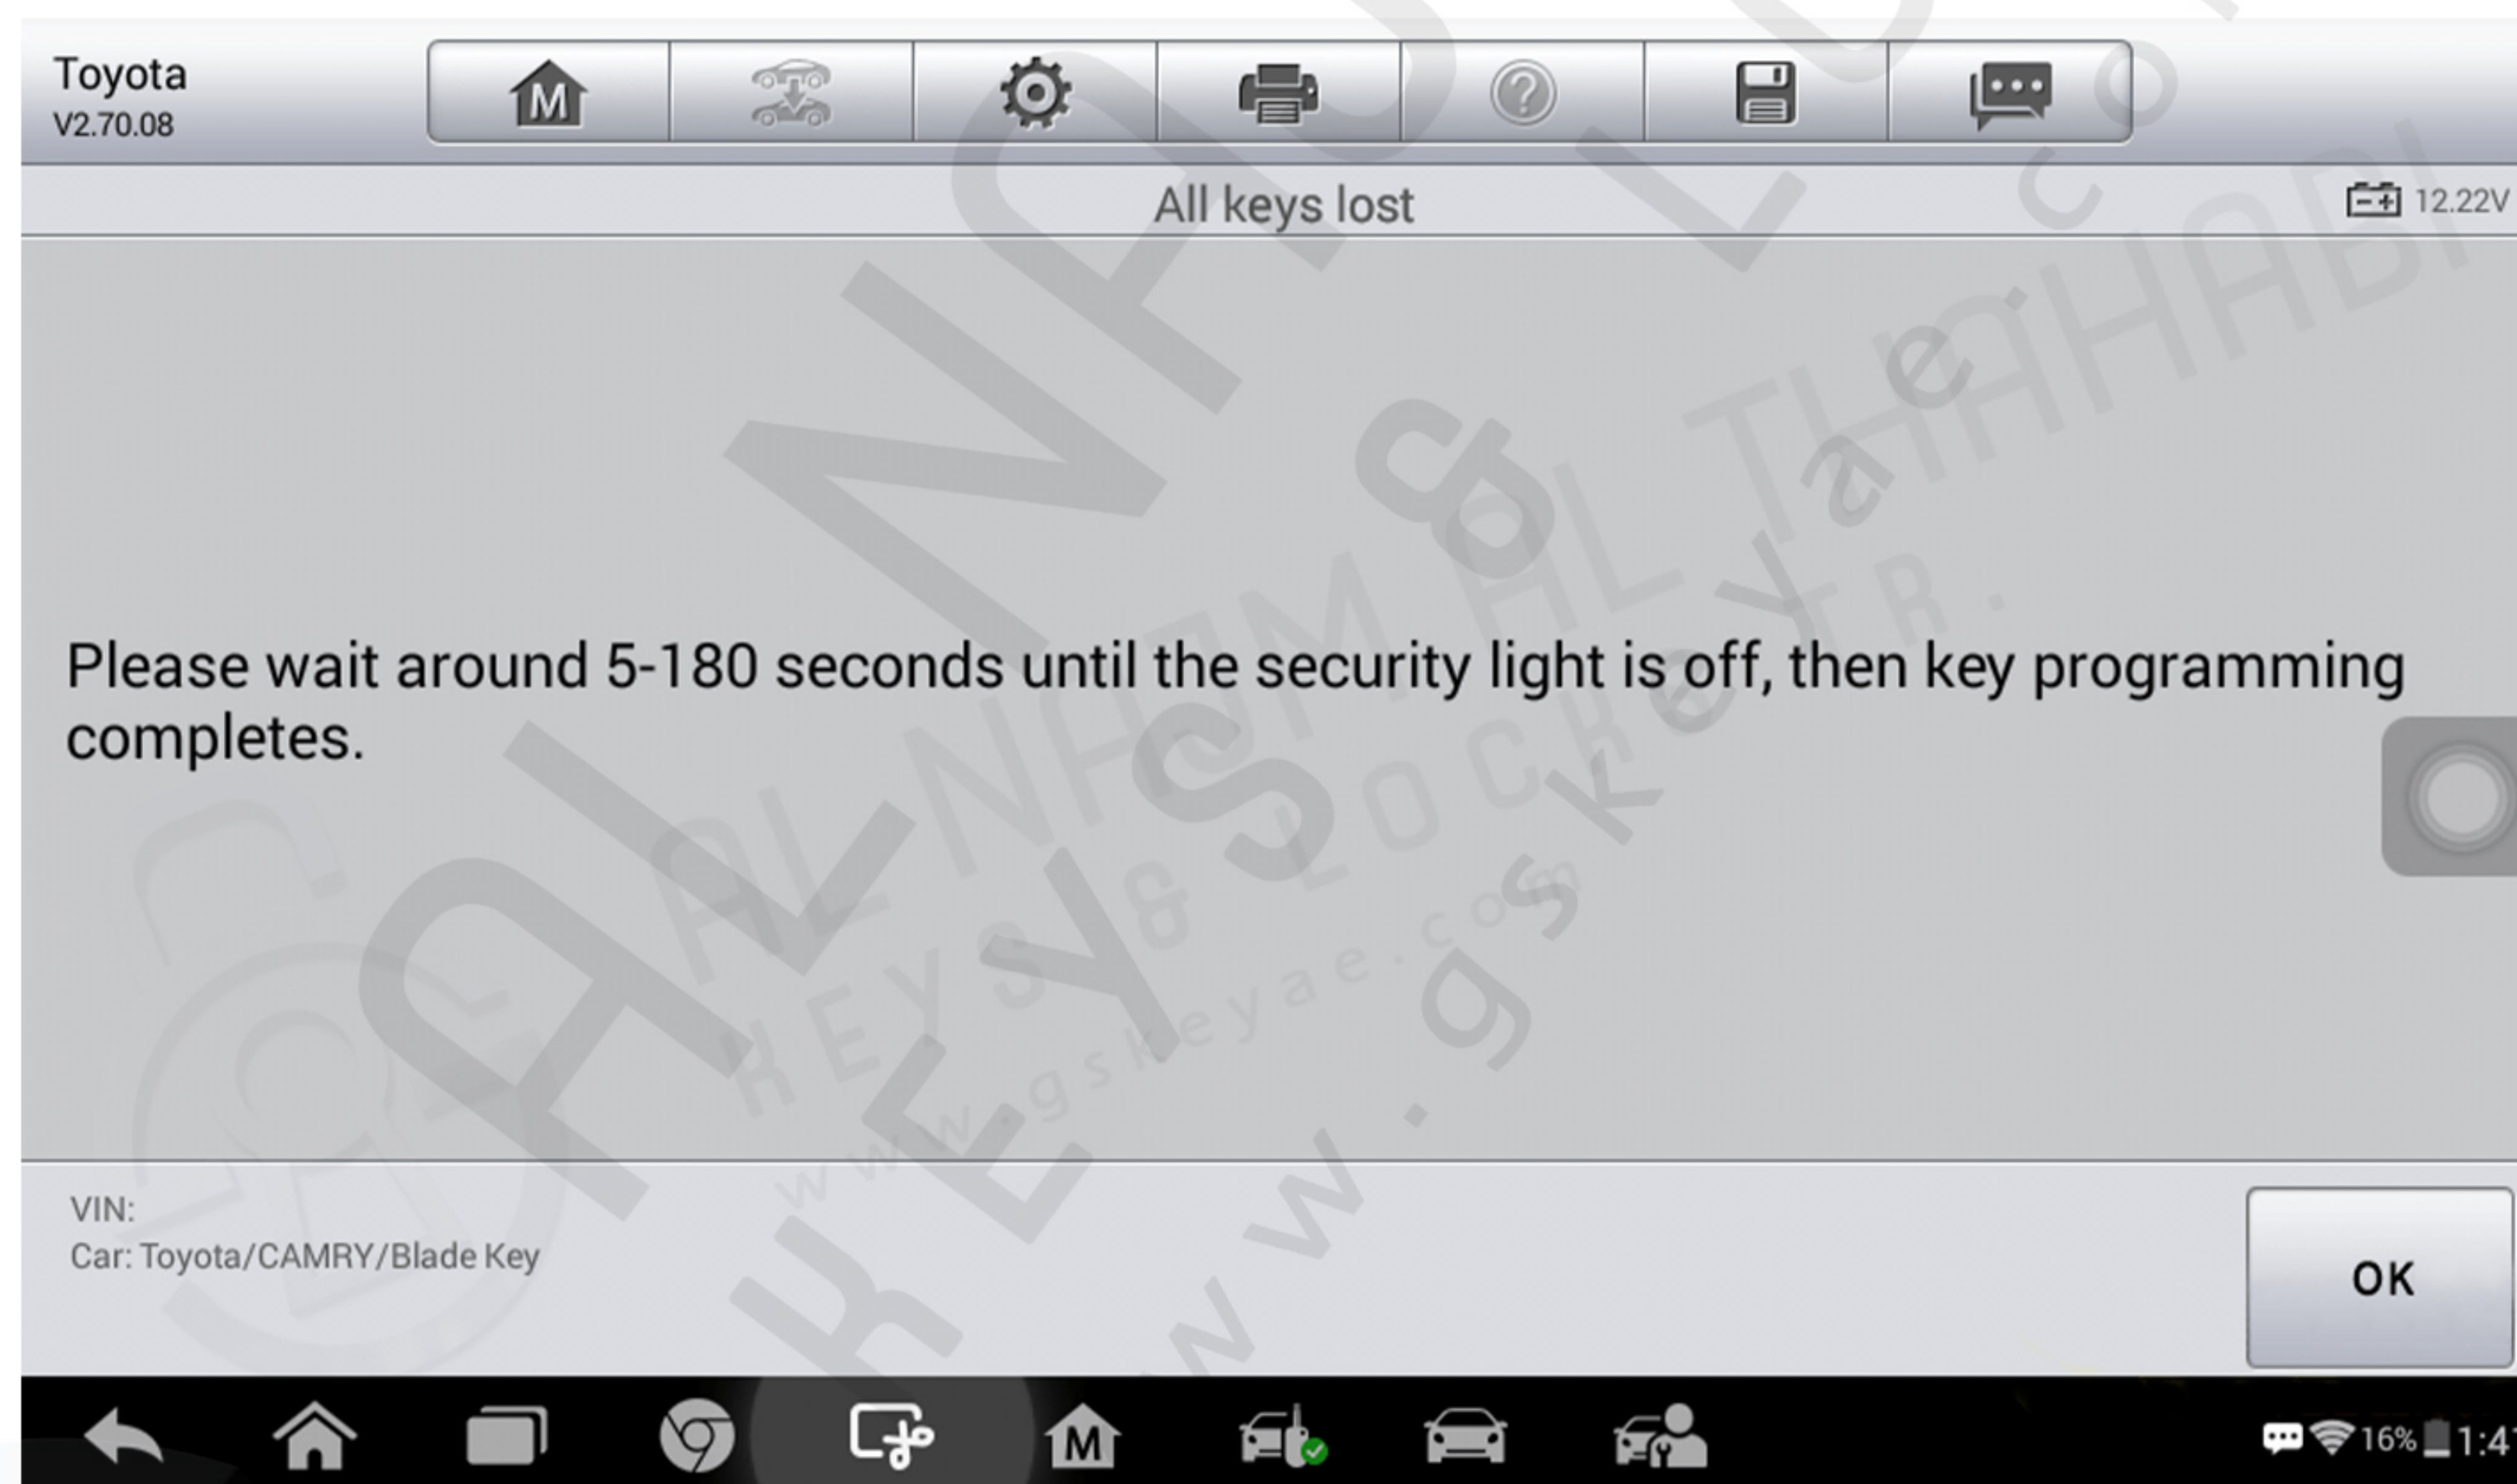

18 - Use the new key to start the engine, to check if the new key functions.

Autel Toyota 8A Blade AKL Kit Package List:

1 set x AUTEL Toyota 8A Wiring Harness



SCAN ME